XD 9004H ADKDSWDHD 11/09/2015



# Simple. Smart.



# XLT Gas Oven & AVI Hood Installation & Operation Manual



This appliance is for professional use by qualified personnel. This appliance must be installed by qualified persons in accordance with the regulations in force. This appliance must be installed with sufficient ventilation to prevent the occurrence of unacceptable concentrations of substances harmful to health in the room in which it is installed. This appliance needs an unobstructed flow of fresh air for satisfactory operation & must be installed in a suitably ventilated room in accordance with current regulations. This appliance should be serviced by qualified personnel at least every 12 months or sooner if heavy use is expected.

Current versions of this manual, Technical/Rough-In Specifications, Parts & Service Manual, Architectural Drawings, & a list of International Authorized Distributors are available at: <a href="https://www.xltovens.com">www.xltovens.com</a>

For use with the following XLT GAS Oven Versions: For u

For use with the following AVI Gas Hood Versions:

Australia (AE) D

Korea (K) D

Standard (S) D

World (W) D

Standard (S) D World (W) D



Intertek Intertek 2000887

0359 N4279



XLT Ovens PO Box 9090 Wichita, Kansas 67277

US: 888-443-2751 FAX: 316-943-2769 INTL: 316-943-2751 WEB: www.xltovens.com

# **WARNING & SAFETY INFORMATION**



### **SAFETY DEPENDS ON YOU**





Improper installation, adjustment, alteration, service or maintenance can cause property damage, injury, or death. Read the installation, operating and maintenance instructions thoroughly before installing, using, or servicing this equipment.

• Post in a prominent location instructions to be followed in the event you smell gas. This information can be obtained by consulting your local gas supplier.



#### FOR YOUR SAFETY

Do not store or use gasoline or other flammable liquids or vapors in the vicinity of this or any other appliance.

- In the event a gas odor is detected, shut off the gas at the main shutoff valve immediately. Contact your local Gas Company or supplier.
- Do not restrict the flow of combustion and/or ventilation air to the unit. Provide adequate clearance for operating, cleaning, maintaining the unit & adequate clearance for operating the gas shutoff valve when the unit is in the installed position.
- Keep the area free & clear of combustible material. <u>DO NOT SPRAY AEROSOLS IN THE</u> VICINITY OF THIS APPLIANCE WHILE IT IS IN OPERATION.
- Ovens are certified for installation on combustible floors.
- Electrical schematics are located inside the control box of the oven and in this manual. Disconnect input power to the unit before performing any maintenance.
- This unit requires a ventilation hood. The installation must conform to local codes.
- This unit may be operated with either natural gas or liquid petroleum fuel as designated on the nameplate label located on the side of the unit.
- This unit must be operated by the same voltage, phase, & frequency of electrical power as designated on the nameplate label located on the side of the unit.
- Minimum clearances must be maintained from combustible & non-combustible construction materials.
- Follow all local codes when installing this unit.
- Follow all local codes to electrically ground the unit.
- Appliance is not to be cleaned with high pressure water.
- XLT ovens are certified for use in stacks of up to three (3) units of XLT products. Integration of other manufacturer's products into an oven stack is not recommended, & voids any warranties. XLT Ovens assumes no liability for mixed product applications.
- Failure to call XLT Customer Service at 1-888-443-2751 prior to contacting a repair company voids any & all warranties.
- PLEASE RETAIN THIS MANUAL FOR FUTURE REFERENCE.

XLT Ovens has spent millions of dollars designing and testing our products as well as developing Installation & Operation Manuals. These manuals are the most complete and easiest to understand in the industry. However, they are worthless if they are not followed.

We have witnessed store operators and building owners lose many thousands of dollars in lost revenue due to incorrect installations. We highly recommend you follow all instructions given in this manual as well as follow best practices in plumbing, electrical, and HVAC building codes.

Simple. Smart.

Technical Support US: 888-443-2751 Technical Support INTL: 316-943-2751

# **Definitions & Symbols**

A safety instruction (message) includes a "Safety Alert Symbol" & a signal word or phrase such as **DANGER**, **WARNING** or **CAUTION**. Each signal word has the following meaning:



**DANGER** 

Indicates a potentially hazardous situation that, if not avoided, can result in serious injury or death.



HIGH VOLTAGE This symbol indicates high voltage. It calls your attention to items or operations that could be dangerous to you & other persons operating this equipment. Read the message & follow the instructions carefully.



Indicates a potentially hazardous situation, that if not avoided, can result in cuts or being crushed. It calls your attention to items or operations that could be dangerous to you & other persons operating this equipment.



Indicates a potentially hazardous situation, that if not avoided, can result in minor to moderate injury or serious damage to the product. The situation described in the CAUTION may, if not avoided, lead to serious results. Important safety measures are described in CAUTION (as well as WARNING), so be sure to observe them.



Notes indicates an area or subject of special merit, emphasizing either the product's capability or common errors in operation or maintenance.



Tips give a special instruction that can save time or provide other benefits while installing or using the product. The tip calls attention to an idea that may not be obvious to first-time users of the product.

Technical Support US: 888-443-2751



### Warranty - US and Canada

Rev D Approval Date: 10/28/2013

XLT warrants gas ovens manufactured after April 1, 2009 and all electric ovens manufactured after April 1, 2011 to be free from any defect in material and workmanship under normal use for five (5) years from the date of original purchase by the end user, and further warrants main fan blades, conveyor shafts, and conveyor bearings for ten (10) years. XLT further warrants all ovens to be free from rust for ten (10) years from the date the equipment is originally purchased. XLT warrants AVI hoods to be free from any defect in material and workmanship under normal use for two (2) years from the date of original purchase by the end user purchaser. In the event of a part failure, XLT will furnish a replacement part and pay for all labor associated with the replacement of the part. If upon inspection XLT determines that the part is not defective, all incurred cost will be the responsibility of the end user purchaser. This warranty is extended to the original end user purchaser and is not transferable without prior written consent of XLT. Damages are limited to the original purchase price.

#### **DUTIES OF THE OWNER:**

- The owner must inspect the equipment and crates at time of receipt. Damage during shipment is to be immediately reported to the carrier and also to XLT
- The equipment must be installed and operated in accordance with the written instructions furnished with the unit
- This warranty shall not excuse the owner from properly maintaining the equipment in accordance with the written instructions furnished with the unit
- A copy of the "Initial Start-Up Checklist" must be filled out and returned to XLT when the unit is initially installed, and/or when the unit is removed and installed in another location
- The gas, electric, and HVAC utilities must be connected to the oven and installed by locally licensed contractors
- Failure to contact XLT Ovens prior to contacting a repair company for warranty work voids any and all warranties

#### WHAT IS NOT COVERED:

- Freight damage
- Overtime charges
- Any part that becomes defective because of utility services (power surges, high or low voltages, high or low gas pressure or volume, contaminated fuel, or improper utility connections)
- Any part that becomes defective because of moisture and/or other contaminants
- Conveyor belts
- Filters
- Exhaust Fans
- Light Bulbs
- Normal maintenance or adjustments
- This warranty shall not apply if the equipment or any part is damaged as a result of accident, casualty, alteration, misuse, abuse, improper cleaning, improper installation, improper operation, natural disasters, or man-made disasters

#### **CLAIMS HANDLED AS FOLLOWS:**

Should any such defect be discovered, XLT must be notified. Upon notification, XLT will arrange for necessary repairs to be made by an authorized service agent. Denial of services upon the arrival of an authorized service agent will release XLT of any and all warranty obligations.





#### Warranty - International

Rev F Approval Date: 07/01/2014

When purchased through an Authorized International Distributor, XLT warrants its products manufactured after July 1, 2014 to be free from any defect in material and workmanship under normal use. The Authorized International Distributor will repair XLT products during the warranty period. This warranty is extended to the original end user purchaser and is not transferable without prior written consent of the Authorized International Distributor. Damages are limited to the original purchase price. Products purchased by any other means other than an Authorized International Distributor will have no warranty. This warranty applies to areas outside the 50 United States of America.

#### **DUTIES OF THE OWNER:**

- The owner must inspect the equipment and crates at time of receipt. Damage during shipment is to be immediately reported to the carrier and also to the Authorized International Distributor.
- The equipment must be operated in accordance with the written instructions furnished with the unit.
- This warranty is not valid unless equipment is installed, started, and demonstrated under the supervision of the Authorized International Distributor.
- This warranty shall not excuse the owner from properly maintaining the equipment in accordance with the written instructions furnished with the unit.
- A copy of the "Initial Start-Up Checklist" must be filled out and returned to the Authorized International
  Distributor when the unit is initially installed, and/or when the unit is removed and installed in another
  location.
- The gas, electric, and HVAC utilities must be connected to the equipment and installed by locally licensed contractors.
- The Authorized International Distributor must be contacted for service. Failure to contact the Authorized International Distributor prior to contacting a repair company for warranty work voids any and all warranties.

#### WHAT IS COVERED (Subject to local market conditions):

- 2 year labor Extensions may be available and charges may apply
- 5 year parts Extensions may be available and charges may apply
- 5 years parts and labor on: oven fan blade, structural welds, conveyor shafts, conveyor bearings, rusted materials in ovens

#### WHAT IS NOT COVERED (Subject to local market conditions):

- Freight damage
- Any part that becomes defective because of utility services (power surges, high or low voltages, high or low gas pressure or volume, contaminated fuel, or improper utility connections)
- Any part that becomes defective because of moisture and/or other contaminants
- Conveyor belts
- Filters
- Exhaust fans
- Light bulbs
- Rusted materials in hoods
- Normal maintenance or adjustments
- This warranty shall not apply if the equipment or any part is damaged as a result of accident, casualty, alteration, misuse, abuse, improper cleaning, use of caustic/acidic chemicals, improper installation, improper operation, natural disasters, or man-made disasters

#### **CLAIMS HANDLED AS FOLLOWS:**

Should any such defect be discovered, the Authorized International Distributor must be notified. Upon notification, the Authorized International Distributor will arrange for necessary repairs.



#### NOTIFY CARRIER OF DAMAGE AT ONCE

Upon receiving of all goods shipped by a Common Carrier, check for any exterior damage that may indicate interior damage. If conditions permit, open all crates & do a full inspection for any damage while the delivery driver is still there. If there is damage, please note on the delivery receipt & call the carrier to make a freight damage claim within 24 hours of receipt. Failure to make a damage claim within the first 24 hours may void the opportunity to have the claim resolved.

XLT Ovens wants you to be totally satisfied with every aspect of owning & using your oven & hood. Your feedback, both positive & negative, is very important to us as it helps us understand how to improve our products & our company. Our goal is to provide you with equipment that we are proud to build & you will be proud to own.

To receive technical support for the oven or hood you purchased, XLT has qualified customer service personnel that can provide assistance on any type of XLT oven problem you may experience. Customer Service is available 24/7/365 or visit <a href="www.xltovens.com">www.xltovens.com</a>.



Installation of all gas appliances & ventilation exhaust hoods should only be performed by a qualified professional who has read & understands these instructions & is familiar with proper safety precautions. Read this manual thoroughly before installing or servicing this equipment.

#### Save this Manual

This document is the property of the owner of this equipment.

XLT Ovens reserves the right to make changes in design & specifications, and/or make additions to or improvements to its product without imposing any obligations upon itself to install them in products previously manufactured.

All Right Hand & Left Hand designations in this manual are from the point of view as if standing directly in front of the glass sandwich door.

	Revision History Table									
Revision	Comments	Date								
G	Removed All 3270 and 3870 Single Burner Information	06/15/2015								
Н	Updated Heating Values and Orifice Sizes On Page 14 and Oven and Hood Weights On Pages 11 and 43. Also, Updated Oven Requirements On Page 16 and Australian Certifications On Page 104.	11/09/2015								



Technical Support US: 888-443-2751

Warning & Safety Information	2
Warranty	4
Oven Description	8
Oven Dimensions & Weights	10
Oven Requirements	12
Oven Only Rough-In Specifications	19
Oven Assembly	20
Oven Installation	26
Oven Fire Suppression	27
Oven Ventilation Requirements & Guidelines	29
Oven Initial Start-Up	30
Oven Operation	31
Oven Operator Controls	32
Oven Cleaning	33
Oven Maintenance	37
Oven Troubleshooting	38
Hood Description	41
Hood Dimensions & Weights	42
Recommended Exhaust Flow Rates	44
Hood Electrical Requirements	46
Hood Rough-In Specifications	47
Hood Electrical Connections	48
Hood Installation	62
Hood Initial Start-Up	81
Hood Operator Controls	82
Hood Valance Kit	83
Hood Duct Wrap Kit	86
Hood Cleaning	87
Hood Troubleshooting	88
Electrical Schematics	89
Certifications	103
Oven Start-Up Checklist	
Hood Start-Un Checklist	107

This manual covers the following Oven & Hood models:

Ovens	Hoods
X3D-1832-xxxxx	H3D-1832-xxxxx
X3D-2440-xxxxx	H3D-2440-xxxxx
X3D-3240-xxxxx	H3D-3240-xxxxx
X3D-3255-xxxxx	H3D-3255-xxxxx
X3D-3270-xxxxx-2B	H3D-3270-xxxxx-2B
X3D-3855-xxxxx	H3D-3855-xxxxx
X3D-3870-xxxxx-2B	H3D-3870-xxxxx-2B


The first 2 digits of the model number after the dash represent the conveyor width and the last two digits indicate the bake chamber length. The five x's after those numbers represents the oven and hood configuration number. The 3270-2B & 3870-2B models have two burners, one on each side, & have two control boxes. All other models have only a single burner with a single control box that can be supplied on either end. The ovens may be used in a single, double, or triple oven stack configuration. All ovens are gas-fired & are available in Natural gas or Liquid Petroleum gas models (Electric ovens are also available). All models can be configured for a split belt conveyor.


#### **OVEN DESCRIPTION**

Food product is placed on the stainless steel wire conveyor belt on one side of the oven. The conveyor then transports the food through the bake chamber at a user-controlled speed. This provides repeatable and uniform food cooking. The conveyors can be easily configured to move either left-to-right or right-to-left. A large center sandwich door allows the introduction or removal of food items for cooking at shorter times. Precise temperatures are user adjustable and maintained by a digital control.


An easily removable front panel allows the full cleaning of the oven interior. All exposed oven surfaces both exterior and interior are stainless steel. The conveyor is a one piece design and is removed from the side which has the control box. No tools are required for disassembly and cleaning of the conveyor or oven interior. The oven itself is mounted on lockable swivel casters for easy moving and maintenance.


Accessories such as extended conveyor shelves, base shelves, extended fronts, fire suppression components, and perforated crumb trays are available from XLT. In addition, moving equipment such as carts and lifting jacks are available to help install and move ovens. Please contact XLT Ovens or your Authorized Distributor for more information.

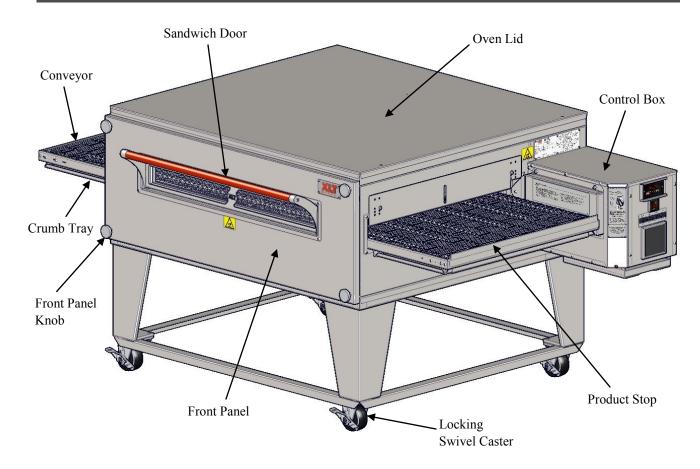


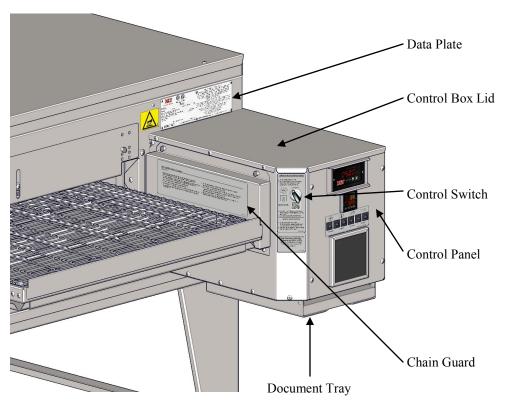




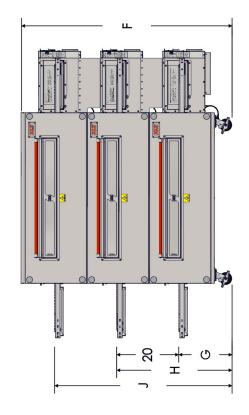

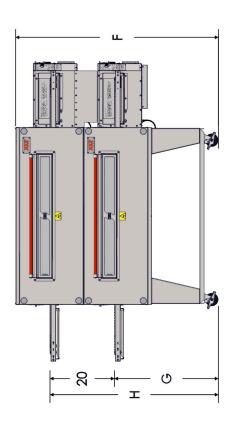

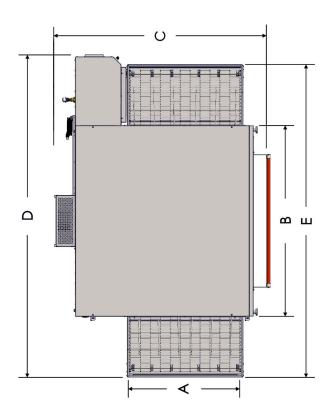

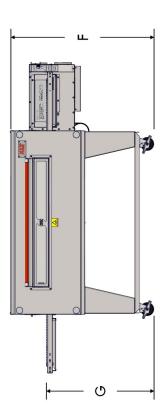




Technical Support US: 888-443-2751

,	e noted.
	otherwis
,	nnless
	grams
:	kilog
•	spunoc
	ghts in [
	All wei
	noted.
•	herwise
	nless ot
	6 j. u.
	± 1/4
,	meters],
	m
,	inches
	ons in
,	dimensi
;	: All (
	NOLE

SINGLE	A	В	C	D	Е	F	G	Н	J	OVEN WEIGHT	CRATED WEIGHT
OVEN	18	32	48 3/8	70 1/4	67 1/4	42 3/4	32			609	746
1832	[457]	[813]	[1229]	[1784]	[1708]	[1086]	[813]	N/A	N/A	[276]	[338]
	24	40	54 3/8	78 1/4	75 1/4	42 3/4	32			726	880
2440	[610]	[1016]	[1381]	[1988]	[1911]	[1086]	[813]	N/A	N/A	[329]	[399]
	32	40	62 3/8	78 1/4	75 1/4	42 3/4	32			755	915
3240	[813]	[1016]	[1584]	[1988]	[1911]	[1086]	[813]	N/A	N/A	[342]	[415]
	32	55	62 3/8	93 1/4	90 1/4	42 3/4	32			884	1064
3255	[813]	[1397]	[1584]	[2369]	[2292]	[1086]	[813]	N/A	N/A	[401]	[483]
	32	70	62 3/8	111	105 1/4	42 3/4	32			1128	1322
3270-2B	[813]	[1778]	[1584]	[2819]	[2673]	[1086]	[813]	N/A	N/A	[512]	[600]
	38	55	68 3/8	93 1/4	90 1/4	42 3/4	32			981	1166
3855	[965]	[1397]	[1737]	[2369]	[2292]	[1086]	[813]	N/A	N/A	[445]	[529]
	38	70	68 3/8	111	105 1/4	42 3/4	32	27/1	2.7/1	1279	1478
3870-2B	[965]	[1778]	[1737]	[2819]	[2673]	[1086]	[813]	N/A	N/A	[580]	[670]
DOUBLE		D	C	D	Г	Г	C	7.7	т.	OVEN	CRATED
STACK	A	В	С	D	Е	F	G	Н	J	WEIGHT	WEIGHT
1922	18	32	48 3/8	70 1/4	67 1/4	62 3/4	32	52	NT/A	1123	1397
1832	[457]	[813]	[1229]	[1784]	[1708]	[1594]	[813]	[1321]	N/A	[509]	[634]
2440	24	40	54 3/8	78 1/4	75 1/4	62 3/4	32	52	NT/A	1342	1650
2440	[610]	[1016]	[1381]	[1988]	[1911]	[1594]	[813]	[1321]	N/A	[609]	[748]
2240	32	40	62 3/8	78 1/4	75 1/4	62 3/4	32	52	NT/A	1389	1709
3240	[813]	[1016]	[1584]	[1988]	[1911]	[1594]	[813]	[1321]	N/A	[630]	[775]
3255	32	55	62 3/8	93 1/4	90 1/4	62 3/4	32	52	N/A	1629	1989
3233	[813]	[1397]	[1584]	[2369]	[2292]	[1594]	[813]	[1321]	IN/A	[739]	[902]
3270-2B	32	70	62 3/8	111	105 1/4	62 3/4	32	52	N/A	2099	2487
3270-2B	[813]	[1778]	[1584]	[2819]	[2673]	[1594]	[813]	[1321]	1 <b>V</b> / /A	[952]	[1128]
3855	38	55	68 3/8	93 1/4	90 1/4	62 3/4	32	52	N/A	1812	2182
3633	[965]	[1397]	[1737]	[2369]	[2292]	[1594]	[813]	[1321]	11/71	[822]	[990]
3870-2B	38	70	68 3/8	111	105 1/4	62 3/4	32	52	N/A	2385	2783
3670-2B	[965]	[1778]	[1737]	[2819]	[2673]	[1594]	[813]	[1321]	11/71	[1082]	[1262]
TRIPLE	A	В	С	D	Е	F	G	Н	J	OVEN	CRATED
STACK										WEIGHT	WEIGHT
1832	18	32	48 3/8	70 1/4	67 1/4	67 3/4	17	37	57	1603	2014
	[457]	[813]	[1229]	[1784]	[1708]	[1721]	[432]	[940]	[1448]	[727]	[914]
2440	24	40	54 3/8	78 1/4	75 1/4	67 3/4	17	37	57	1927	2389
	[610]	[1016]	[1381]	[1988]	[1911]	[1721]	[432]	[940]	[1448]	[874]	[1084]
3240	32	40	62 3/8	78 1/4	75 1/4	67 3/4	17	37	57	1985	2465
	[813]	[1016]	[1584]	[1988]	[1911]	[1721]	[432]	[940]	[1448]	[900]	[1118]
3255	32	55	62 3/8	93 1/4	90 1/4	67 3/4	17	37	57	2335	2875
	[813]	[1397]	[1584]	[2369]	[2292]	[1721]	[433]	[941]	[1448]	[1059]	[1304]
3270-2B	32	70	62 3/8	111	105 1/4	67 3/4	17	37	57	3032	3614
	[813]	[1778]	[1584]	[2819]	[2673]	[1721]	[433]	[941]	[1448]	[1375]	[1639]
3855	38	55	68 3/8	93 1/4	90 1/4	67 3/4	17	37	57	2602	3157
	[965]	[1397]	[1737]	[2369]	[2292]	[1721]	[433]	[941]	[1448]	[1180]	[1432]
3870-2B	38	70	68 3/8	111	105 1/4	67 3/4	17	37	57	3445	4042
	[965]	[1778]	[1737]	[2819]	[2673]	[1721]	[433]	[941]	[1448]	[1563]	[1833]

#### GAS AND ELECTRICAL INLET DIMENSIONS WORLD & AUSTRALIA

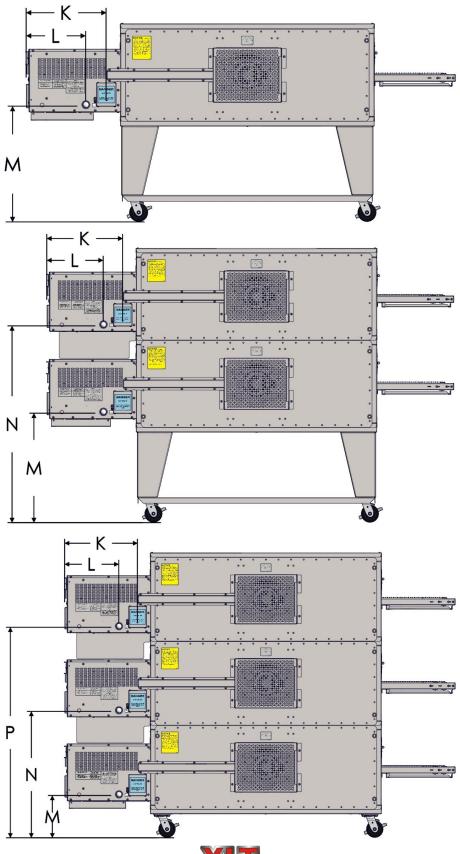

Technical Support US: 888-443-2751

XLT.

NOTE: All dimensions in inches [millimeters], ± 1/4 [6], unless otherwise noted. All weights in pounds [kilograms] unless otherwise noted.

SINGLE OVEN	K	L	M	N	P
1922	18.25	13	25 1/2	-	-
1832	[464]	[330]	[648]	-	-
2440	18.25	13	25 1/2	-	-
2 <del>44</del> 0	[464]	[330]	[648]	-	-
3240	18.25	13	25 1/2	-	-
3240	[464]	[330]	[648]	-	-
3255	18.25	13	25 1/2	-	-
3233	[464]	[330]	[648]	-	-
3270-2B	18.25	13	25 1/2	-	-
3270-2B	[464]	[330]	[648]	-	-
3855	18.25	13	25 1/2	-	-
3033	[464]	[330]	[648]	-	-
3870-2B	18.25	13	25 1/2	-	-
36/U-2B	[464]	[330]	[648]	_	_

DOUBLE STACK	K	L	M	N	P
1832	18.25	13	25 1/2	45 1/2	-
1032	[464]	[330]	[648]	[1156]	-
2440	18.25	13	25 1/2	45 1/2	-
2 <del>44</del> 0	[464]	[330]	[648]	[1156]	-
3240	18.25	13	25 1/2	45 1/2	-
3240	[464]	[330]	[648]	[1156]	-
3255	18.25	13	25 1/2	45 1/2	-
3233	[464]	[330]	[648]	[1156]	-
3270-2B	18.25	13	25 1/2	45 1/2	-
3270 <b>-</b> 2B	[464]	[330]	[648]	[1156]	-
2055	18.25	13	25 1/2	45 1/2	-
3855	[464]	[330]	[648]	[1156]	-
3870-2B	18.25	13	25 1/2	45 1/2	-
3670-2B	[464]	[330]	[648]	[1156]	-

TRIPLE STACK	K	L	M	N	P
1832	18.25	13	10 1/4	35 1/4	55 1/4
	[464]	[330]	[260]	[895]	[1403]
2440	18.25	13 [330]	10 1/4	35 1/4 [895]	55 1/4 [1403]
3240	18.25	13 [330]	10 1/4	35 1/4 [895]	55 1/4 [1403]
3255	18.25	13	10 1/4	35 1/4	55 1/4
	[464]	[330]	[260]	[895]	[1403]
3270-2B	18.25	13	10 1/4	35 1/4	55 1/4
	[464]	[330]	[260]	[895]	[1403]
3855	18.25	13	10 1/4	35 1/4	55 1/4
	[464]	[330]	[260]	[895]	[1403]
3870-2B	18.25	13	10 1/4	35 1/4	55 1/4
	[464]	[330]	[260]	[895]	[1403]

# OVEN REQUIREMENTS

All values shown on this page are per each oven

	Standard & Korea Gas Oven Heating Values & Orifice Sizes										
Owen	Heating	Values		Orifice Sizes							
Oven Model	All I	Tuels	N/	<b>A</b> T	LP						
Model	BTU/HR	KW/HR	Inches	MM	Inches	MM					
1832	47,700	14.50	0.125	3.18	0.081	2.06					
2440	67,200	18.00	0.144	3.66	0.089	2.26					
3240	96,100	23.00	0.170	4.31	0.111	2.82					
3255	119,900	31.95	0.191	4.82	0.116	2.95					
3270-2B	140,800	36.84	0.144	3.66	0.096	2.44					
3855	142,200	41.00	0.209	5.31	0.125	3.18					
3870-2B	137,900	36.84	0.144	3.66	0.096	2.44					

World Gas Oven Heating Values & Orifice Sizes										
		Heating	Values		Orific	e Sizes				
Oven Model	[G	[G30] [G20][G31]			NAT [G20]	LP [G30][G31]				
	KW/HR	MJ/HR	KW/HR	MJ/HR	MM	MM				
1832	16.07	57.85	14.50	52.20	3.05	2.06				
2440	19.30	69.48	18.00	64.80	3.66	2.26				
3240	25.54	91.94	23.00	82.80	4.22	2.64				
3255	37.34	134.42	31.95	115.02	4.82	2.95				
3270-2B	42.23	152.03	36.84	132.62	3.66	2.44				
3855	42.44 152.78		41.00	147.60	5.31	3.18				
3870-2B	40.26	144.94	36.84	132.62	3.66	2.44				

Australia Gas Oven Heating Values & Orifice Sizes									
Oven	Heating Values	Orifice Sizes							
Model	All Fuels	NAT	LP						
	MJ/HR	MM	MM						
1832	50.32	3.18	2.06						
2440	70.89	3.66	2.26						
3240	101.39	4.31	2.82						
3255	126.50	4.82	2.95						
3270-2B	148.55	3.66	2.44						
3855	150.02	5.31	3.18						
3870-2B	145.49	3.66	2.44						

	Gas Oven Fuel Pressure Requirements											
Oven Models	Inlet Pressure Range						Manifold Pressure					
	Natural Gas				LP Gas			Natural Gas			LP Gas	
	W/C	mbar	kPa	W/C	mbar	kPa	W/C	mbar	kPa	W/C	mbar	kPa
All	6-14	15-35	1.5-3.5	11.5-14	27.5-35.0	2.75-3.50	3.5	8.75	0.875	10	25	2.5



Technical Support US: 888-443-2751

	World Oven Gas Group							
	Natural Gas				Propane Gas			
Gas Group	$I_{2H}$	$I_{2E}$	$I_{2E^+}$	$I_{\rm 2L}$	$I_{3+}$	I <sub>3B/P (30)</sub>	I <sub>3P (30/37/50)</sub>	I <sub>3B (37)</sub>
Inlet pressure (mbar)	20	20	20/25	25	28/30/37/50	28-30/37/50	30/37/50	37
Number of injectors	(1) per burner							
Main burner opening size	Fixed							
Ignition	Electric Direct Spark Igniter							
Inlet connection	BSP 3/4" male thread							

Gas Matrix by Country								
Commen	Cymphal	Natura	al Gas (8.7	5 mbar m	LP Gas (25 mbar manifold)			
Country	Symbol	$I_{2H}$	$I_{2L}$	$I_{2E}$	I <sub>2E+</sub>	I <sub>3B/P</sub>	$I_{3+}$	I <sub>3P</sub>
Austria	AT	X				X		
Belgium	BE				X		X	
Cyprus	CY					X	X	X
Czech Republic	CZ	X				X		
Denmark	DK	X				X		
Estonia	EE	X						
Finland	FI	X				X		
France	FR				X	X	X	X
Germany	DE			X		X		X
Greece	GR	X						
Hungary	HU					X		X
Iceland	IS							
Ireland	IE	X					X	X
Italy	IT	X					X	
Latvia	LT					X		
Lithuania	LV							
Luxembourg	LU							
Malta	MT					X		X
Netherlands	NL		X			X		X
Norway	NO					X		
Poland	PL			X				
Portugal	PT	X					X	X
Slovakia	SK					X		
Slovenia	SI	X						
Spain	ES	X					X	X
Sweden	SE	X				X		
Switzerland	СН	X				X	X	X
United Kingdom	GB	X					X	X

Simple. Smart.

Technical Support US: 888-443-2751

# **OVEN REQUIREMENTS**

### Gas Supply Requirements for Australian, Standard & World Ovens



All installations must conform to local building & mechanical codes.

#### **NOTE**

- 1. The gas supply shall have a gas meter & regulator large enough to handle ALL of the gas appliances, such as the furnace, water heater, & ovens in operation at the same time. Add up all of the Btu/kw/MJ ratings to determine the total load.
- 2. The gas supply shall have a separate gas meter and gas pressure regulator for each occupant. Installations in multiple occupancy buildings, (strip malls) shall not share gas meters and regulators with other occupants.
- 3. Gas hose assemblies with quick disconnects for each oven deck will be installed at each valve.
- 4. A sediment trap shall be installed downstream of the equipment shutoff valve as close to the inlet of the appliance as practical at the time of appliance installation. The sediment trap shall be either a tee fitting with a capped nipple in the bottom outlet as illustrated, and in accordance with ANSI Z223.1-2012 and NFPA 54-2012 National Fuel Gas Code, section 9.6.7.
- 5. The composition of gases varies greatly from time to time and from place to place. For this reason, the material used for the gas lines shall be steel or malleable iron, not copper. ANSI Z83.11-2006 CSA 1.8-2006 Gas Food Service Equipment states: "Copper tubing or semi rigid tubing with internal copper layering, whether internally tinned or not, shall not be used for conveying gases." ANSI Z223.1 NFPA 54 National Fuel Gas Code states: "Copper and brass tubing shall not be used if the gas contains more than an average of 0.3 grains of hydrogen sulfide per 100 scf of gas (0,7 mg/100L)."
- 6. The requirements of AS 5061/AG 601 (to be AS 5601), local authority, gas, electricity and any other relevant statutory regulations.




Do not use Teflon tape on gas line connections as this can possibly cause gas valve malfunction or plugging of orifices from shreds of tape. Use of Teflon tape may af-**CAUTION** fect warranty.



Technical Support US: 888-443-2751

• A minimum of a 1 1/2 supply line is required.

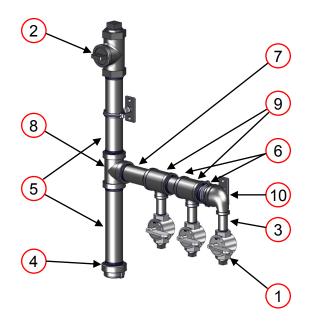

Item#	Description	Qty
1	3/4 Manual Gas Valve	3
2	1-1/2 Ball Valve	1
3	<sup>3</sup> / <sub>4</sub> x 3 Nipple	3
4	1-½ Pipe Cap	1
5	1-½ x 10 Nipple	2
6	1-1/2 x 3 Nipple	2
7	1-½ x 5 Nipple	1
8	1-½ Tee	1
9	1-½ x ¾ x 1-½ Reducing Tee	2
10	1-1/2 x 3/4 Reducing Elbow	1

### **Gas Supply Testing Requirements**

- 1. The appliance & its individual shutoff valve must be **disconnected** from the gas supply piping system during any pressure testing of that system at test pressures in **excess** of 3.5 kPa or ½-psi.
- 2. The appliance must be **isolated** from the gas supply piping system by closing its individual manual shutoff valve during any pressure testing of the gas supply piping system at test pressures **equal to or less than** 3.45 kPa or ½-psi.

# **Gas Hose Requirements**

- For Australia, if installing with a flexible hose assembly, the assembly must be certified to AS/NZS 1869, & be Class B or D.
- For Standard Ovens, if installing with a flexible gas hose, the installation must comply with either ANSI Z21.69 or CAN/CGA-6.16 & a disconnect device complying with either ANSI Z21.41 or CAN-6.9.
- The installation must conform with local building codes, or in the absence of local codes, with the National Fuel Gas Code, ANSI Z223.1, latest version, Natural Gas Installation Code, CAN/ CGA-B149.1, or the Liquid Petroleum Gas Installation Code, CAN/CGA-B149.2, as applicable.

All values shown this page are per each oven

Gas Oven Electrical Requirements								
Per EACH Oven								
Oven	en Standard			Aust	tralia & W	Korea		
Model	<b>Volts AC</b>	Amps Hertz		<b>Volts AC</b>	Amps	Hertz	Volts AC	Watts
1832		6			3			
2440		6			3			660
3240	120 VAC	6		220/230/	3		220 VAC	000
3255	120 VAC 1Φ	6	50/60	240 VAC	3	50/60	1Φ	
3270-2B	$1\Psi$	12		1Ф	6		ΙΨ	1320
3855		6			3			660
3870-2B		12			6			1320

#### FOR EACH OVEN:

- A separate 20A circuit breaker must be provided for each oven deck.
- Electrical connections must be accessible when the ovens are in the installed position.
- Electrical connections must meet all local code requirements.

#### **Electrical Grounding Instructions**

#### **Standard Ovens**

- This appliance is equipped with a three-prong (grounding) plug for your protection against shock hazard & should be plugged into a properly grounded three-prong receptacle. Do not cut or remove the grounding prong from this plug.
- When installed, the appliance must be electrically grounded in accordance with local codes, or in the absence of local codes, with the National Electrical Code, ANSI/NFPA 70, or the Canadian Electrical Code, CSA C22.2, as applicable.



#### **World Ovens**

# HIGH VOLTAGE


- This appliance is equipped with a ground lug for your protection against shock hazard & must be properly grounded.
- When installed, the appliance must be electrically grounded in accordance with local codes

#### **Australian Ovens**

- This appliance is equipped with a ground lug for your protection against shock hazard & must be properly grounded.
- The electrical service must be installed in accordance with AS/NZS 3000 Wiring Rules.


Simple, Smart.

Technical Support US: 888-443-2751

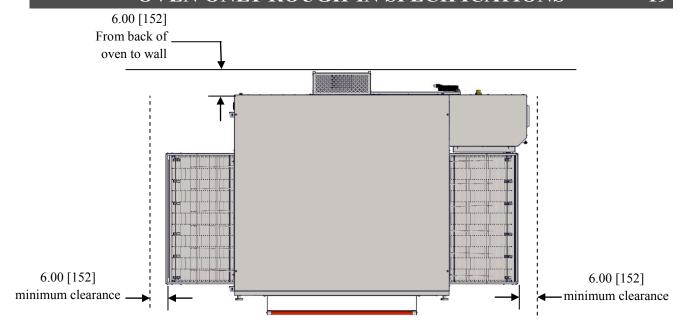




Utilities must be easily accessible when the ovens are in the installed position. Do not install utilities behind the ovens.

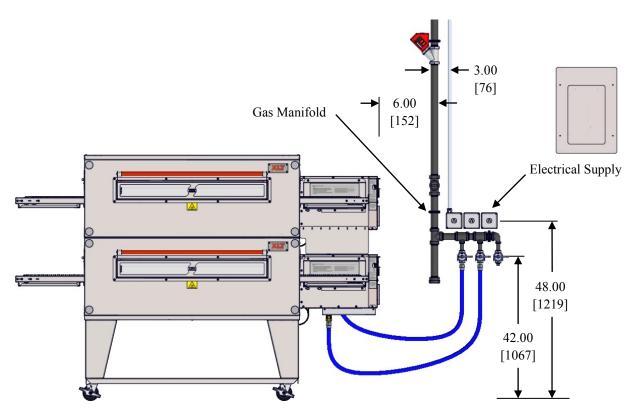




All installations must conform to local building and mechanical codes. It is required that the ovens be placed under a ventilation hood to provide exhaust ventilation and adequate air supply.

# **Base Assembly - Triple Stack**

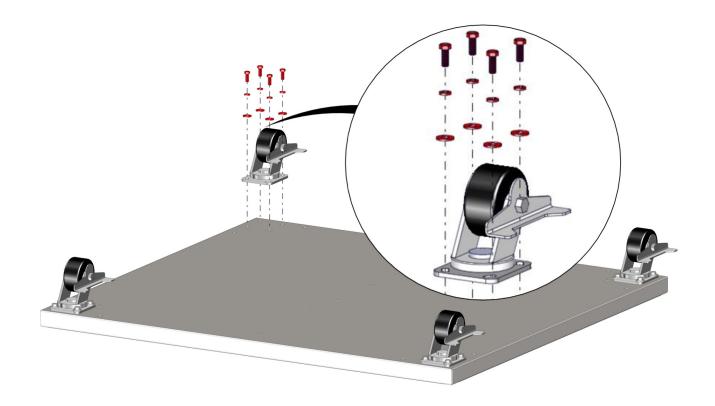

# **Base Assembly - Single & Double Stack**

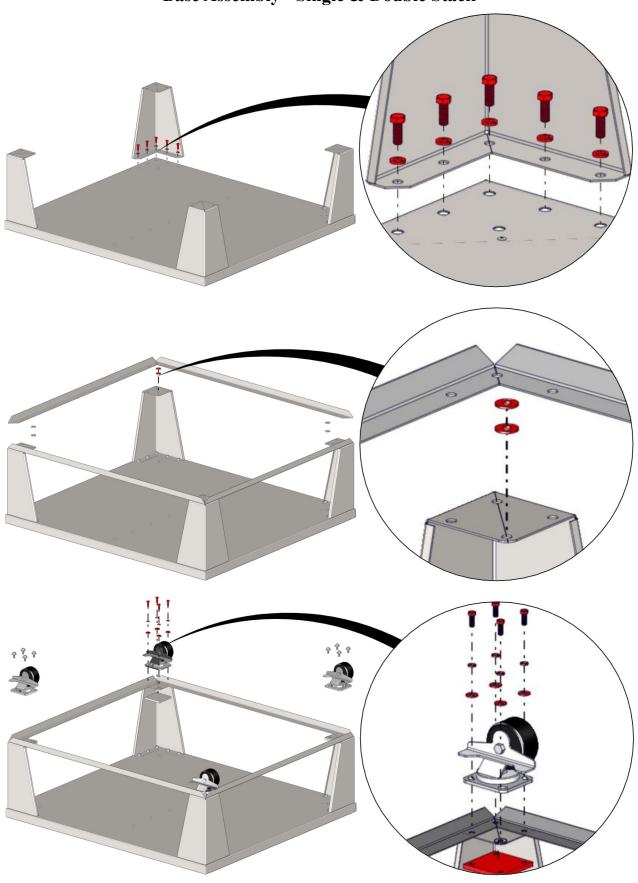

Technical Support US: 888-443-2751

Simple, Smart

#### WARNING & SAFETY INFORMATION

XLT ovens can easily be moved and stacked with the proper lifting equipment. The use of XLT approved lifting equipment is highly recommended. Contact XLT for more information.



- These ovens are heavy & can tip or fall causing bodily injury.
- NEVER place any part of your body beneath any oven that is suspended by the lifting jacks. A crush hazard exists if the oven falls or slips.
- DO NOT place your hands on the lifting jack vertical pole beneath the jack's winch. As the jack's winch descends when you turn the jack handle, a pinch point is created between the winch & the pole.



BE CAREFUL when rolling the oven on the cart, especially when going up or down ramps & over bumps. Leave the straps/banding on until the oven is near the assembly area.

Make sure that the notch on tube of the winch assembly is aligned with the pin in the tripod base as shown. These alignments are important and keep the jack aligned properly.
Check for smooth operation. The cable should not be pinched and should pass





- smoothly over the pulley on top of the pole assembly.Inspect cable prior to each use.
- If cable is frayed or shows signs of excessive wear and tear, DO NOT USE until cable is replaced.
- At a minimum replace the cable annually with wire rope that meets or exceeds the jack manufacturer's specifications.

Technical Support INTL: 316-943-2751


• Do not exceed the stated capacity of the jack.

Technical Support US: 888-443-2751

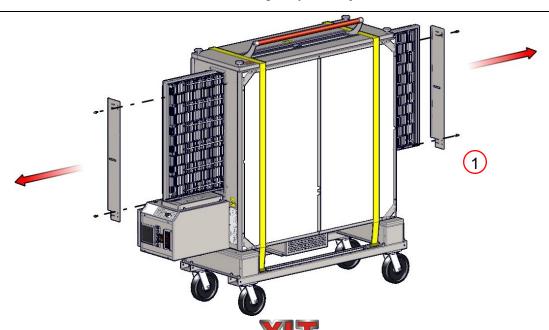

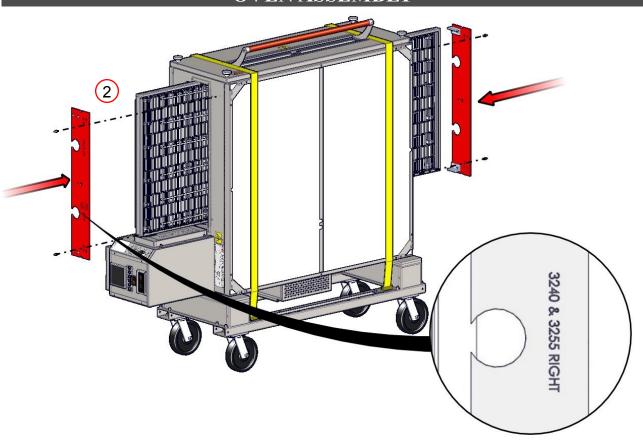

The Lifting Pipe hole, marked for the appropriate oven size, must be installed closest to the control box.

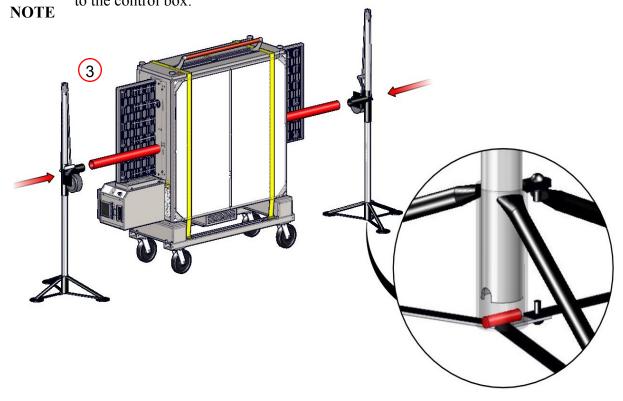

Simple, Smart

# **OVEN ASSEMBLY**

# **Stacking the Ovens**




**DANGER** 

Failure to engage the Lifting Jacks into the Lifting Pipe properly and completely will result in damage, injury, or death from a falling oven.




**DANGER** 

- Both jacks should be raised in unison, otherwise they may bind and a dangerous situation will develop.
- Do not put any part of yourself under the oven at any time.
- The Oven is top heavy. Be careful.

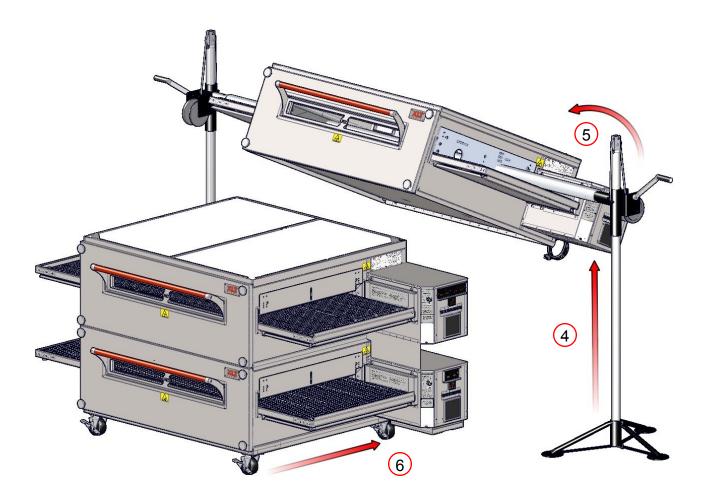

Technical Support US: 888-443-2751

# **Stacking the Ovens**

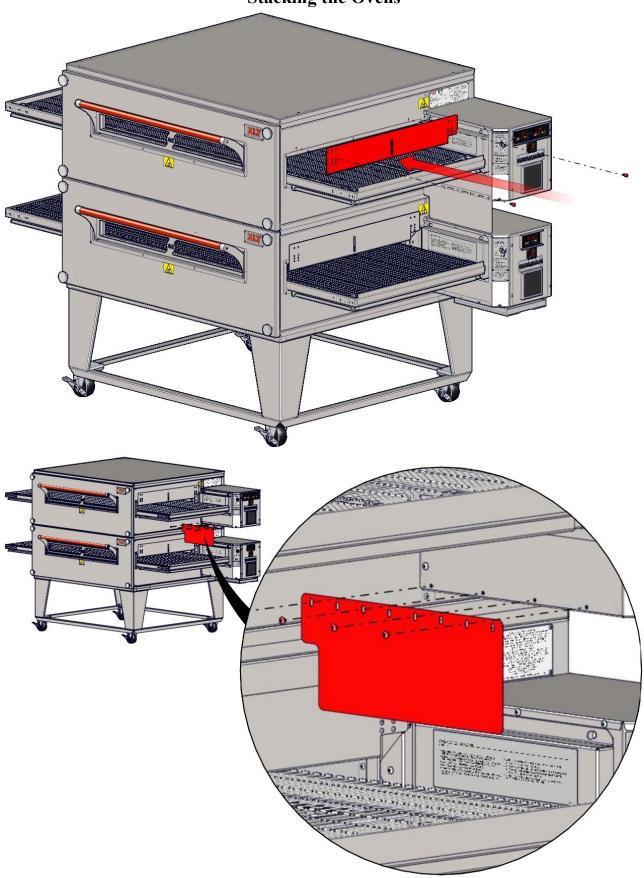

XLT.

# **Physical Location & Spacing Requirements**

These ovens are suitable for installation on either combustible or non-combustible floors, and adjacent to either combustible or non-combustible walls. The motor cover is designed to provide the proper clearance to the back of the oven. The minimum side clearances are 6in. / 150mm, measured from the end of the conveyor.




All installations must conform to local building and mechanical codes. In Australia, install the restraint cable in accordance with AS 5601.

#### Restraint

Because all ovens are equipped with casters, all installations must be configured with a restraint to limit the movement of the oven without depending on the electric power supply cord or gas hose to limit the oven movement. One (1) restraint kit, which includes one (1) eye bolt, (1) stainless steel clip & a cable, is required for each oven stack, regardless if used on a single, double, or triple configuration. The clip should be installed in the lowest hole of the back wall on the control end of the lowest oven in the stack. The lag eye bolt must be installed into a structural member of a wall or the floor. It is the owner's responsibility to ensure the restraint is installed correctly.

Upon completion of performing any service or cleaning functions that require removal of the restraint, insure that it is correctly re-attached to the oven.

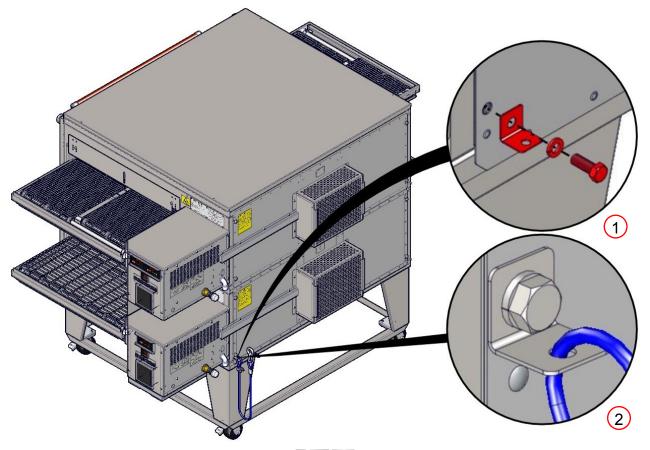

Technical Support US: 888-443-2751


XIT.

The requirement for fire suppression systems vary by location and the authority having jurisdiction. If you are required to install fire suppression on your oven, a pre-assembled piping kit is available that utilizes pre-existing holes to simplify installation and future service.




This design has been tested and approved to successfully comply with fire suppression codes. It uses only two (2) nozzles per bake chamber, and allows crumb trays, chain guards, and all other accessories to be easily removed. The kit does not interfere with any operations or maintenance.


For fire suppression detailed information see manual XD-9011 Fire Suppression Installation for AVI Hoods and XLT Ovens.

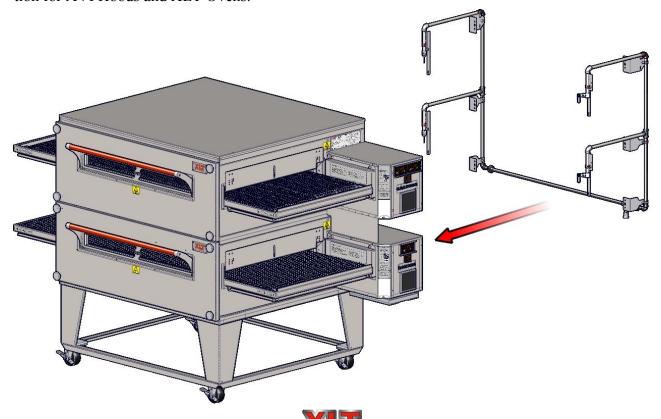

Technical Support INTL: 316-943-2751

Technical Support US: 888-443-2751

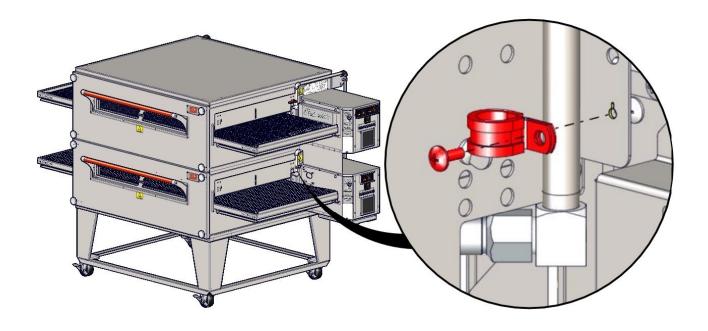

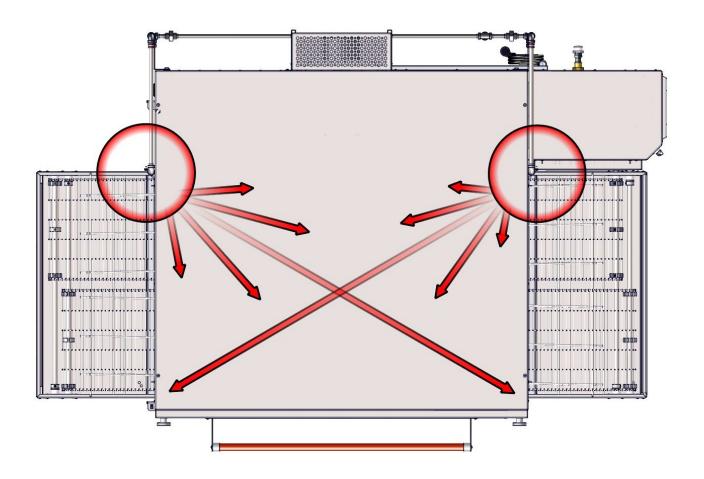



Technical Support US: 888-443-2751

### **Ventilation Requirements**

A powered ventilation hood is required to remove heat and vapors. Some provision must be made to replenish the amount of air that is extracted from the building. The hood and HVAC installation must meet local building and mechanical codes. Requirements vary throughout the country depending upon location. Proper ventilation is the oven owner's responsibility. The AVI Hood system is designed to meet all requirements for XLT ovens and it is our recommendation that this system be used.

#### **Ventilation Guidelines**

Obtain information from the authority having jurisdiction to determine the requirements for your installation. Your ventilation hood supplier and HVAC contractor should be contacted to provide guidance. An air balance test is highly recommended, performed by a licensed contractor. A properly engineered and installed ventilation hood and HVAC system will expedite approval, reduce all maintenance costs, and provide a more comfortable working environment. XLT also recommends that the operator switches for the ovens and the operator switch for the exhaust fan be interlocked so that the exhaust fan gets energized whenever the ovens are turned on. For more information, see the following links at <a href="mailto:xltovens.com">xltovens.com</a>:

Kitchen Ventilation Design Guide 1 Kitchen Ventilation Design Guide 2 Kitchen Ventilation Design Guide 3 Kitchen Ventilation Design Guide 4

#### **Ventilation Performance Test**

After the oven and ventilation hood have been installed and are operating, a smoke candle can be used to "see" if the heat and vapors are being completely extracted. The test procedure is outlined below:

- The oven must be operating at 450°-500°F / 232°-260°C.
- The conveyor must be turned off.
- The ventilation hood exhaust fan must be turned on.
- Put a smoke candle in a pan on the conveyor belt at the center of the oven.
- Observe the smoke pattern coming out of the oven.
- Repeat the smoke candle test for each oven, as well as when all ovens are operating.

The ventilation hood must capture all of the smoke from the oven.

After the exhaust fan has been adjusted to completely capture and contain the heat, there needs to be a corresponding amount of make up air (MUA) introduced into the building to offset the amount of air volume being removed. An air balance test can determine the proper amount of make-up air flow rates.

Simple. Smart.

Technical Support US: 888-443-2751

Technical Support INTL: 316-943-2751

## 30

## **OVEN INITIAL START-UP**

All ovens are tested at the factory for functional operation. Operation is verified and adjustments are made to ensure proper function. However, field conditions are sometimes different than factory conditions. It is necessary to have an authorized service technician verify operation and make field adjustments if needed.

The Oven Initial Start-Up Checklist, found at the end of this manual, must be completed (both sides) at time of installation, signed by the Customer and returned to XLT Ovens and the Authorized Distributor to initiate Warranty Policy.

If the Start-Up Checklist is not filled out completely and returned to XLT Ovens, then the Warranty will not be honored.

#### Start-up Procedure:

Ensure that all ovens have been installed in accordance with the I&O Manual and that all utilities are connected to the ovens in compliance with local building codes. A copy of the Start-up checklist is located at the end of this manual.

- 1. Fill out Step 1 on the checklist with all information and print legibly.
- Place 1 control box in service position and document incoming gas pressure (Refer to P&S
  manual for gas valve adjustments) If gas pressure is not within XLT specifications contact gas
  company to adjust.
- 3. Place all control boxes in service position, remove all blue tags from inside all control boxes and connect switch to wire harness. Start each oven and complete form.
- 4. With all appliances running, check the dynamic gas pressure. If gas pressure is not within XLT specifications contact gas company to adjust.
- 5. Complete Start-up checklist with owner signature and return to XLT.




Technical Support US: 888-443-2751


Technical Support INTL: 316-943-2751



This oven is not capable of being safely placed in operation in the event of a power failure. No attempt should be made to operate this oven during power failure.

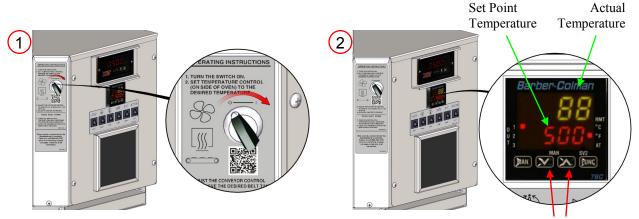

To Adjust Temperature Press Either the Up or Down Arrow.

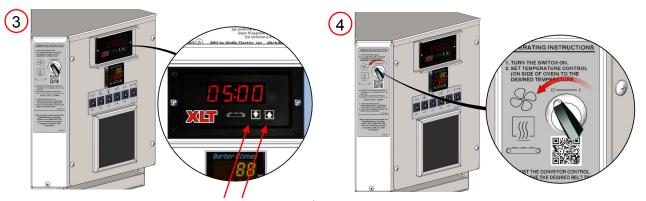

Use Up Arrow to Increase Time Use Down Arrow to Decrease Time


Conveyor Belt Times							
Oven	MINIMUM	MAXIMUM					
Models	WINIMOWI	WAXIMOW					
All	1:30	17:00					

Oven Operating Temperature Range						
Oven Models	MINIMUM	MAXIMUM				
All	400° F	590° F				
All	205° C	310° C				




Technical Support US: 888-443-2751

# **Split Belt Conveyor Time Controls**

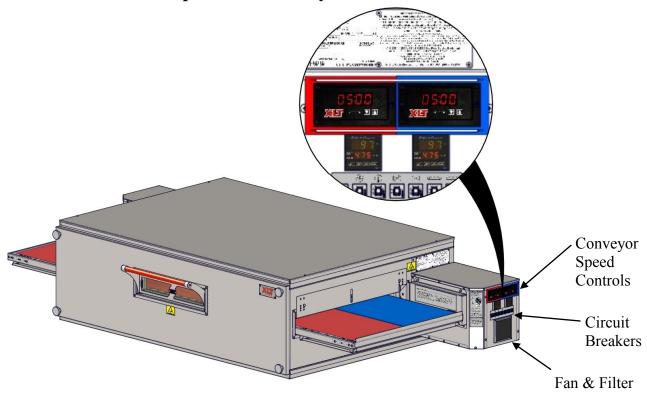

# **Temperature Controls**

3270-2B and 3870-2B Only

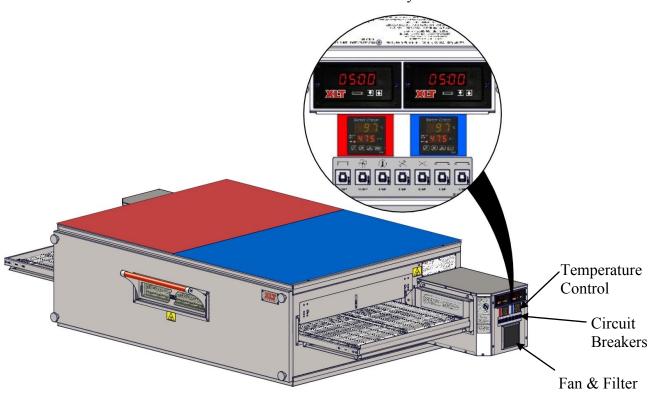

Simple, Smart

Technical Support US: 888-443-2751


# **OVEN CLEANING**

Your XLT oven is constructed of stainless steel. Most commercial cleaning agents may be used safely on all stainless steel surfaces. Check application restrictions on product label prior to usage. Observe recommended precautionary and safety measures as dictated by the product manufacturer. Do not use caustic cleaners on the conveyor bearings.

Do not use abrasive cleaners or abrasive pads as they can scratch stainless steel surfaces. Areas with heavy buildup should be sprayed and allowed to soak for up to 5 minutes prior to wiping clean. Always wipe with the "grain" of the surface to maintain appearance.

Do not use caustic cleaners on the control panel and/or electronic components. Only use cleaners compatible with Lexan® on the face of the conveyor control.

The most critical item to be cleaned is the filter on the fan. The filter is held in place by the stainless steel fan guard/filter mount and can be washed several times. Regular cleaning of the filter is important to maintain air circulation within the control box. Depending upon store conditions, this filter should be cleaned weekly or as it gets clogged with dust. Please contact XLT Ovens for replacement parts.

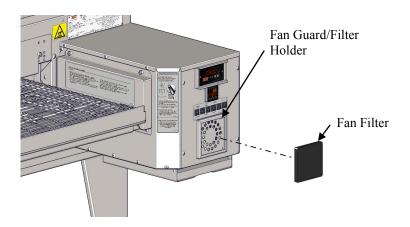




# Oven must be cool and the electric cord unplugged before any cleaning or maintenance is done.



If the oven is to be removed from its installed location for cleaning or servicing, the following procedure is to be followed:

- 1. Shut off main manual gas valve.
- 2. Unplug electric cord.
- 3. Unplug gas line.
- 4. Unlock casters.
- 5. Disconnect restraint.
- 6. When servicing or cleaning is complete, move oven to original location.
- 7. Connect restraint.
- 8. Lock casters.
- 9. Plug in electric cord.
- 10. Plug in gas line.
- 11. Turn manual gas valve on.
- 12. Follow normal lighting instructions.

# **OVEN CLEANING**

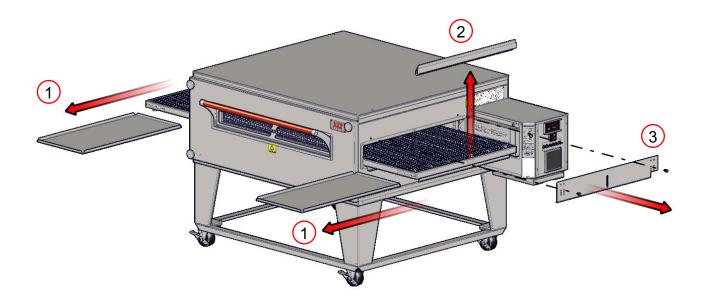




Opening the Sandwich Door will provide a grip location for removing the Front Panel.


TIP



Front Panels can weigh up to 75 lbs. [34 kg]. Use caution when lifting.

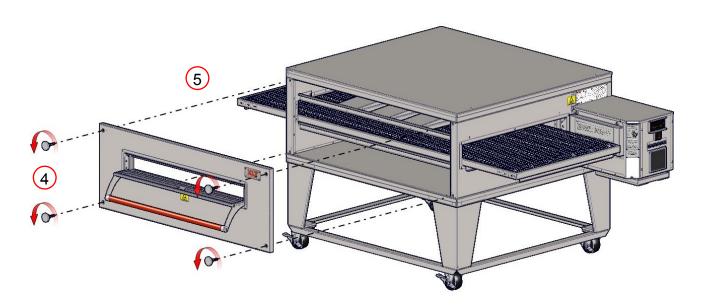




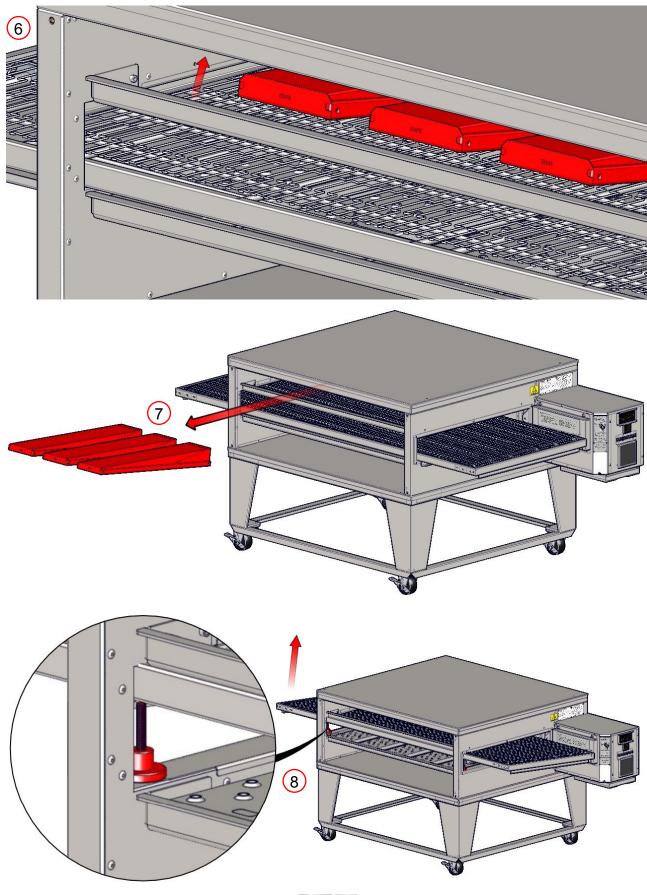

Technical Support US: 888-443-2751



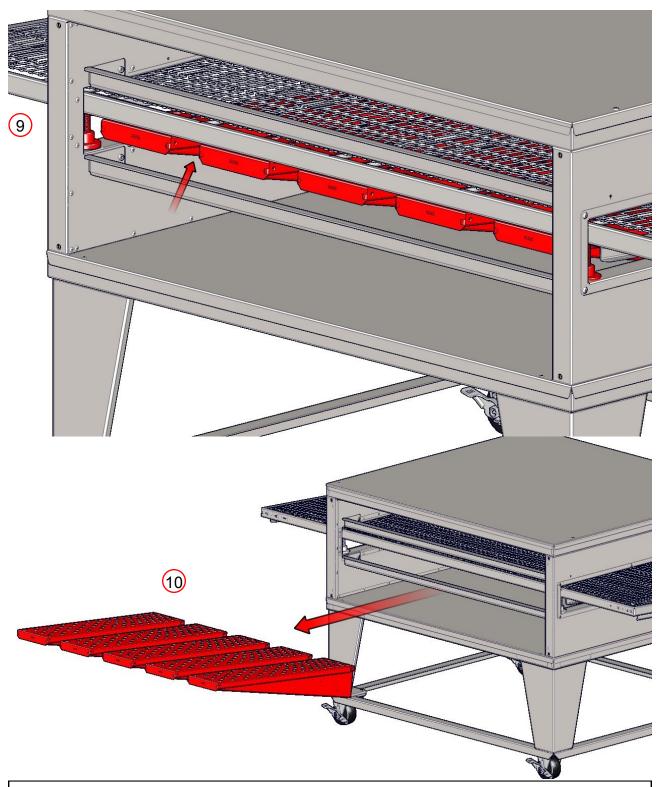



DO NOT spray liquid cleaning agents in the slots and holes in the following locations:

- Rear of Control Box
- Underneath Control Box
- Main Fan Motor Cover

Technical Support US: 888-443-2751



As with any appliance, periodic maintenance is required. Many factors affect this schedule such as product mix and hours of usage. An example schedule is included.

Oven Maintenance Schedule								
		Daily	Weekly	Monthly	Semi- Annual			
Cleaning								
	Empty Crumb Trays							
	Wipe down Front, Sides, & Top							
	Wipe down Control Box & Control Panel *							
	Clean or Replace Fan Filters							
	Remove large debris from Conveyor							
	Wipe down Motor Cover							
	Clean Sandwich Window							
	Remove debris from Finger Outers							
	Remove debris from inside Bake Chamber							
	Remove debris from Main Fan Motor							
	Clean Finger Outers							
	Clean inside Bake Chamber							
	Clean Conveyor Assembly							
Inspection								
	Check Fan Filters for dirt							
	Check Conveyor Wire Belt for Stretch							
	Check Conveyor Drive Roller Chain for Stretch							
Adjust								
	Conveyor Wire Belt							
Lubricate								
	Lubrication of Window Pins W/ Food Grade Grease							
	Conveyor Drive Roller Chain							
Replace			1					
	Fan Filters							

 $<sup>\</sup>ast$  Do not use caustic cleaners on the control panel. Only use cleaners compatible with Lexan® on the face of the conveyor control.

Contact a factory representative or a local service company to perform all other maintenance and repairs.



Oven must be cool and the electric cord unplugged before any cleaning or maintenance is done.

Simple. Smart.

Technical Support US: 888-443-2751

Technical Support INTL: 316-943-2751

# **OVEN TROUBLESHOOTING**

#### **Proper Cooking**

Experimentation is about the only way to determine proper time and temperature settings. While a pizza may look perfectly cooked on the outside, the inside may be undercooked. A thermometer is necessary to determine if food items are being properly cooked. Most health departments have rules and regulations that establish minimum temperatures for internal food temperatures. Most operators want to cook foods as fast as possible in order to serve more customers per hour. However, cooking foods slower is the only way to achieve a proper internal temperature. If your food products look acceptable on the outside, but have an internal temperature that is too low, then lowering the temperature and decreasing the belt speed (thereby increasing the cook time), will be necessary.

Several factors may affect the cooking performance and characteristics:

- Oven temperature (generally affects color)
- Conveyor speed (generally affects doneness)
- Finger arrangement
- Altitude
- Pans versus screens
- Dough thickness
- Cheese type
- Raw ingredient temperature (frozen?)
- Quantity of toppings

XLT ovens can be configured to cook a wide variety of food items. This is accomplished by arranging the fingers to control the baking characteristics. Generally speaking, most cooking is a "bottom up" process. The hot air from the bottom row of fingers has to go through the conveyor (a distance of about 2" / 50.8mm), heat the pan or screen, and then actually cook raw dough. The hot air from the top, on the other hand, basically only has to melt cheese and re-heat precooked toppings. Consequently, most operators will use the oven with the fingers arranged so that a lot more air is directed to the bottom of the pizza than to the top. There are places for an equal number of fingers above and below the conveyor. Available are finger cover plates that have six rows of holes, four rows of holes, two rows of holes, and no holes (or blank cover plates). A typical finger arrangement might have most or even all fingers on the bottom "full open", that is fingers with all six rows of holes, and only two or three fingers on top with four or six rows of holes. The top fingers can be arranged in a symmetrical pattern or can be shifted asymmetrically to either the entrance or exit end of the conveyor. We encourage you to experiment by trying different finger arrangements, temperatures and belt speeds. XLT Ovens can assist you with your oven/product configurations.



Technical Support US: 888-443-2751

Technical Support INTL: 316-943-2751

#### **Mechanical Function**

If your oven does not function properly, please verify the following conditions:

- 1. Verify that the power cord to the oven is connected and/or plugged in if equipped with a plug and receptacle.
- 2. Check all circuit breakers on the oven control panel to ensure they have not been tripped.
- 3. Check to see that the circuit breakers in the building electrical service panel have not been tripped or turned off.
- 4. Check the manual gas valve to verify that it is turned on completely. The handle on the valve should be parallel with the gas piping when the valve is turned on, and the handle will be perpendicular with the gas piping when the valve is turned off. Also remember that anytime the gas hose has been disconnected it will take time to purge the air from the gas train.
- 5. Verify that oven is supplied with gas by disengaging and reengaging the quick-disconnect fitting on the gas hose.
- 6. Check to see that the oven is fully assembled. All of the fingers must be properly installed. Incorrect or incomplete finger placement can cause a "windy" condition that can cause the burner not to light.
- 7. Gas line size and pressure must be adequate to support total BTU requirements with all appliances in store turned *on*. Refer to the "Oven Gas Requirements" section of this manual.
- 8. (Australia Only) In the case of the oven not lighting properly. Turn off the oven and press and hold the manual reset switch on the back of the control box for five seconds. Wait approximately 30 seconds or until the fan stops spinning and turn the oven back on.

If your oven still does not function properly, XLT has qualified customer service personnel that can provide assistance on any type of XLT oven problem you may experience. Customer Service is available 24/7/365 at 888-443-2751, or visit www.xltovens.com.

XIT.

Technical Support US: 888-443-2751

#### 40

#### **HOOD INSTALLATION**



**DANGER** 

Check all local codes prior to installation. Special requirements may be necessary depending upon building material construction. It is the installing contractor's responsibly to ensure that the structure the hood is to be hung from meets all codes and can carry the hood weight.


#### **Purchaser's Responsibility**

It is the responsibility of the purchaser:

- Thoroughly review the floor plans and specifications. The exact location of the oven must be determined before installing the hood.
- To unload, uncrate, assemble, and install the hood to it's intended location.
- To ensure that electric utilities are installed on site in accordance with local building codes and meet the specifications in this manual.
- To see that electric utilities are connected properly by a qualified installer using the proper hardware
- To ensure a qualified installer has performed an initial start-up procedure.
- Location should minimize long and twisted duct runs, and make efforts to have a straight clear path to the roof/wall fan curb.
- All hood supporting structures must be strong enough to support the weight of the hood and shrouds. Refer to the Hood Dimensions & Weights page for weight.
- Maintain the proper clearances from combustible materials according to International Mechanical code (IMC), and National Fire Protection Agency (NFPA) 96, and local mechanical codes.
- In Australia, a ventilation hood to be installed in accordance with AS 5601 Gas Installation.
- To Ensure that the AVI Hood is suspended properly from the ceiling structure.



Technical Support US: 888-443-2751

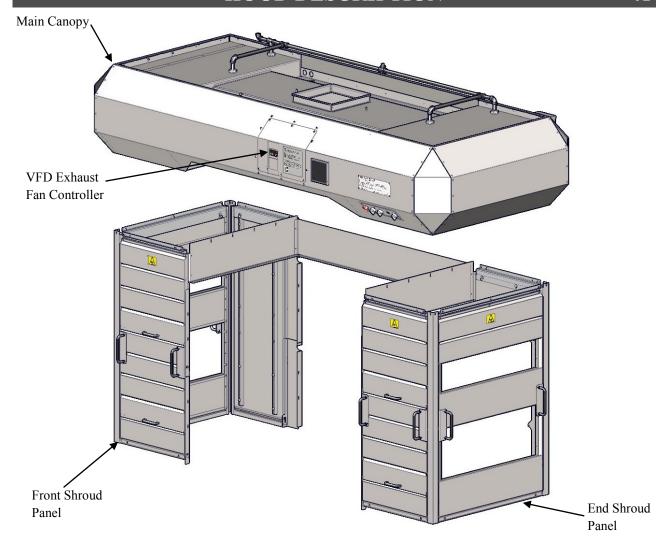

The AVI Hood System consists of three (3) major parts; the Main Canopy, the Shrouds, and the Variable Frequency Drive (VFD) exhaust fan controller.


The Main Canopy serves to collect and transmit heat to the exhaust fan. It houses filters, lights, and switches. The switches control both the hood and ovens. The main canopy size is dependent upon oven size.

The Shrouds assist the efficiency of the main canopy by entrapping heat. They are configurable for either side or end loading or unloading, and are easily removable for cleaning and maintenance.

The VFD converts input power to variable frequency three-phase output power to control the speed of the exhaust fan. All electric utilities for the hood and exhaust fan connect through the electrical box located on the rear of main canopy. The operator switches are located on the control panel on the front of main canopy, and interlock the function of the hood and oven(s). There are optional relays that provide interlocks for equipment such as, fire suppression, HVAC dampers, and/or dedicated MUA units.

All AVI hoods are available pre-piped for fire suppression, allowing for simple, in-field installations. For fire suppression detailed information see manual XD-9011 Fire Suppression Installation for AVI Hoods and XLT Ovens.

The AVI hood was designed to conform to the requirements of IMC 2009, which is a Type I hood. It was also designed to have optional fire suppression added to meet requirements of NFPA 96 standard. This was done to allow XLT to better service the requirements of the customer and the associated jurisdictions.

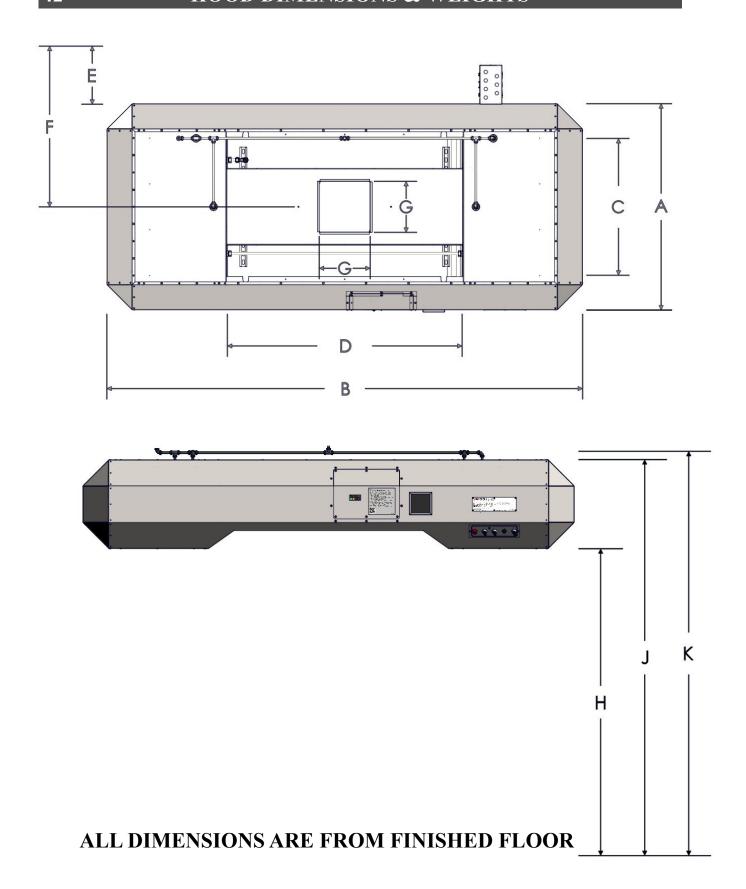

Oven	Hood Dimensions								Hoo	od Wei	ghts	Crate	d Weig	ght (2 C	rates)		
Model	A	В	С	D	E*	F*	G	Н	J	K	Single	Double	Triple	Hood	Single	Double	Triple
1832	34 3/8 [873]	88 5/8 [2251]	18 [457]	32 [813]		30 5/8 [778]					506 [230]	495 [225]	495 [225]	523 [237]	310 [141]	264 [120]	304 [138]
2440	40 3/8 [1026]	96 5/8 [2454]	24 [610]	40 [1016]		33 5/8 [854]					590 [268]	565 [256]	560 [254]	610 [277]	339 [154]	281 [127]	322 [146]
3240	48 3/8 [1229]	96 5/8 [2454]	32 [813]	40 [1016]	13 1/2	37 5/8 [956]	12	69 5/8	89 7/8	91 3/4	685 [311]	640 [290]	660 [299]	661 [300]	373 [169]	304 [138]	333 [151]
3255	48 3/8 [1229]	111 5/8 [2835]	32 [813]	55 [1397]	[343]	37 5/8 [956]	[305]	[1768]	[2283]	[2330]	735 [333]	680 [308]	700 [318]	724 [328]	385 [175]	310 [141]	333 [151]
3270-2B	48 3/8 [1229]	126 5/8 [3216]	32 [813]	70 [1778]		37 5/8 [956]					760 [345]	705 [320]	737 [334]	782 [355]	391 [177]	304 [138]	328 [149]
3855	54 3/8 [1381]	111 5/8 [2835]	38 [965]	55 [1397]		40 5/8 [1032]					795 [361]	730 [331]	745 [338]	764 [347]	408 [185]	310 [141]	339 [154]
3870-2B	54 3/8 [1381]	126 5/8 [3216]	38 [965]	70 [1778]		40 5/8 [1032]					825 [374]	770 [349]	770 [349]	828 [376]	419 [190]	322 [146]	345 [156]

	aust Far b Dimen		Crated Weight (Stacked)
31	31	67	185
[787]	[787]	[1702]	[84]



All dimensions in inches [millimeters],  $\pm 1/4$  [6], unless otherwise noted.

All weights in pounds [kilograms] unless otherwise noted.

\* E and F are the minimum distances from a non combustible wall structure.

	Exhaust Flow Rates VOLUME (min. recommended)									
	Switches On			10	24	22	20			
	Top	Middle	Bottom	18xx	24xx	32xx	38xx			
Cinala	X			500	500	500	500			
Single	Λ			[14.16]	[14.16]	[14.16]	[14.16]			
	X			500	500	500	500			
	Λ			[14.16]	[14.16]	[14.16]	[14.16]			
Double			X	506	644	828	966			
Double			Λ	[14.33]	[18.24]	[23.45]	[27.35]			
	X		X	506	644	828	966			
	Λ		Λ	[14.33]	[18.24]	[23.45]	[27.35]			
	X			500	500	500	500			
				[14.16]	[14.16]	[14.16]	[14.16]			
		X		506	644	828	966			
		Λ		[14.33]	[18.24]	[23.45]	[27.35]			
			X	766	975	1254	1463			
			Λ	[21.69]	[27.61]	[35.51]	[41.43]			
Triple	X	v	X		506	644	828	966		
пре		Λ		[14.33]	[18.24]	[23.45]	[27.35]			
	X		X	766	975	1254	1463			
	Λ		Λ	[21.69]	[27.61]	[35.51]	[41.43]			
		X	X	766	975	1254	1463			
		Λ	Λ	[21.69]	[27.61]	[35.51]	[41.43]			
	X	X	X	766	975	1254	1463			
	Λ	Λ	Λ	[21.69]	[27.61]	[35.51]	[41.43]			



All values are CFM [M3/Min] unless otherwise noted. Figures represent TOTAL VOLUME measured at the duct.

In accordance with mechanical codes, make up air must be supplied. For commercial kitchen make up air, the amount is determined by the exhaust hood flow rate requirements & all other exhaust flow rate requirements in the kitchen.

At a minimum, smoke candles must be used for a Capture & Containment (C&C) test. Refer to the Ventilation Requirements disclosed in the Oven section in this manual.

A Test & Balance (TAB) report is recommended after installation has been completed. Below are the minimum items to be included is this report:

- Total airflow on all A/C, Make-Up Air (MUA), & exhaust systems.
- Airflow on each supply & exhaust grille.
- Airflows on exhaust hoods compared to design specifications.

A final air balance report, with any corrections of issues found in the report, will help to insure that your building systems are functioning properly & efficiently.

Refer to "Oven Ventilation Requirements & Guidelines"



Technical Support US: 888-443-2751

Technical Support INTL: 316-943-2751

	Exhaust Flow Rates VELOCITY (min. recommended)									
		Switches	On	10	24	22	38xx			
	Top	Middle	Bottom	18xx	24xx	32xx				
Cinala	X			187.5	187.5	93.75	93.75			
Single	Α			[57.15]	[57.15]	[28.58]	[28.58]			
	X			187.5	187.5	93.75	93.75			
	Λ			[57.15]	[57.15]	[28.58]	[28.58]			
Double			X	189.75	241.5	155.25	181.125			
Double			Λ	[57.84]	[73.61]	[47.32]	[55.21]			
	X		X	189.75	241.5	155.25	181.125			
	Λ			[57.84]	[73.61]	[47.32]	[55.21]			
	X			187.5	187.5	93.75	93.75			
				[57.15]	[57.15]	[28.58]	[28.58]			
		X		189.75	241.5	155.25	181.125			
		Λ		[57.84]	[73.61]	[47.32]	[55.21]			
			X	287.25	365.625	235.125	274.3125			
			Λ	[87.55]	[111.44]	[71.67]	[83.61]			
Triple	X	v	v	X		189.75	241.5	155.25	181.125	
Tiple		A		[57.84]	[73.61]	[47.32]	[55.21]			
	X		X	287.25	365.625	235.125	274.3125			
	Λ		X	[87.55]	[111.44]	[71.67]	[83.61]			
		X	X	287.25	365.625	235.125	274.3125			
				[87.55]	[111.44]	[71.67]	[83.61]			
	X	X	X	287.25	365.625	235.125	274.3125			
	Λ	. X	Λ	[87.55]	[111.44]	[71.67]	[83.61]			



All values are FPM [M/Min] unless otherwise noted. Figures represent VELOCITY measured at the Grease Filter.



Most building codes require 500 Feet per Minute velocity. Exhaust duct is 1 ft<sup>2</sup>. Check with your local building official for requirements.

The VELOCITY readings above are obtained by holding an anemometer 3" away from the Grease Filter. Take several readings in different locations across the filters and average the results.

Technical Support US: 888-443-2751

#### **Inputs into Junction Box**

	AVI Hood Electric Utility Specifications								
	# of Circuits	Rating	Purpose						
Standard World	1	208/240 VAC, 1 Phase, 60 Hz, 6 Amp	VFD Controller						
	up to 3	120 VAC, 1 Phase, 60 Hz, 20 Amp	Ovens						
	1	230 VAC, 1 Phase, 50 Hz, 6 Amp	VFD Controller						
	up to 3	230 VAC, 1 Phase, 50 Hz, 10 Amp	Ovens						


### **Outputs from Junction Box**


The AVI Hood system provides:

- One (1) switching outputs for HVAC damper and/or dedicated unit. (Optional 2-3 add-on)
- One (1) 230 VAC, 10 Amp, variable frequency, three phase power output for the ventilation exhaust fan.
- Up to Three (3) receptacles for ovens.

Technical Support US: 888-443-2751

• One (1) 120 VAC fire alarm signal for Standard hoods, or one (1) 24 VDC fire alarm signal for World Hoods

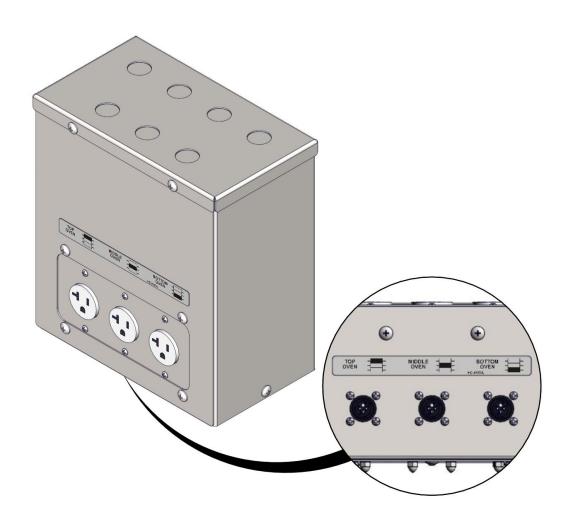

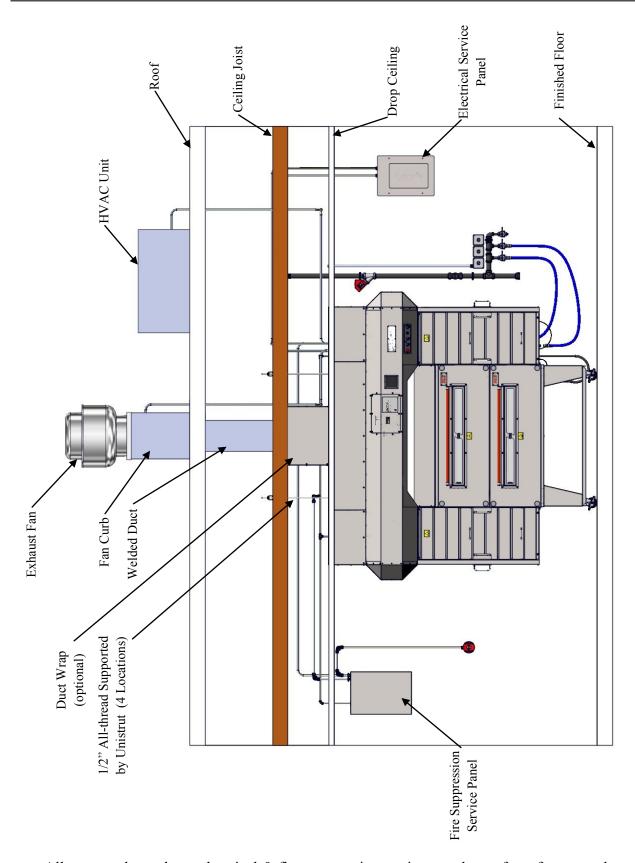


All structural members, electrical & fire suppression equipment shown for reference only.




### **HOOD ELECTRICAL CONNECTIONS**

#### VFD Control Box - Standard w/Fire Suppression

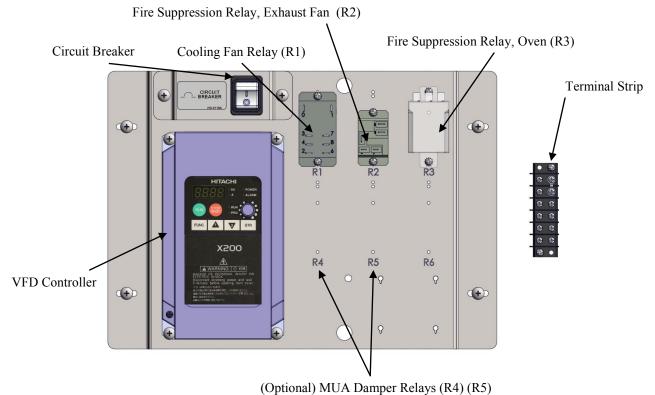


#### (Optional) WOA Damper Relays (R4) (R5)

#### VFD Control Box - World w/Fire Suppression

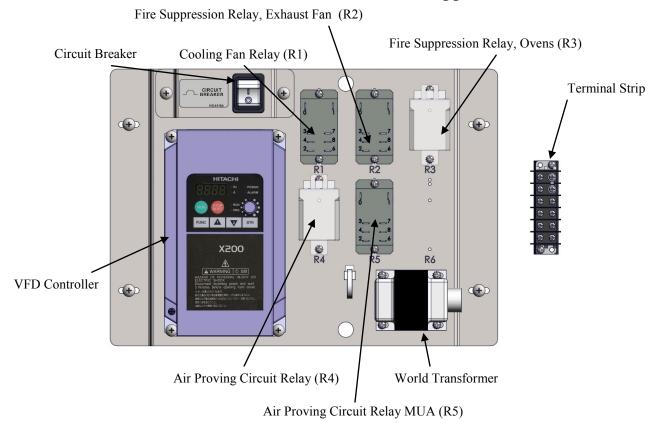


### **Input Power to Lights - Without VFD Controller**

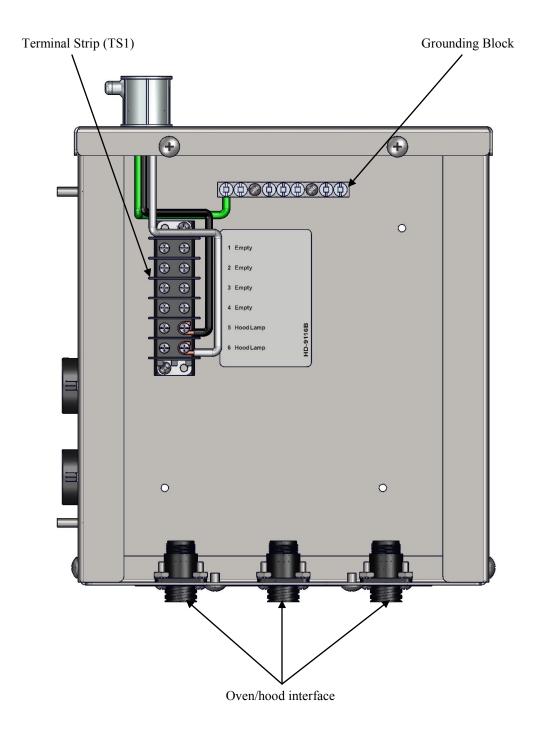

Non-VFD Control Box (Cover removed)




### **Input Power to Ovens - Standard Voltage & Frequency**

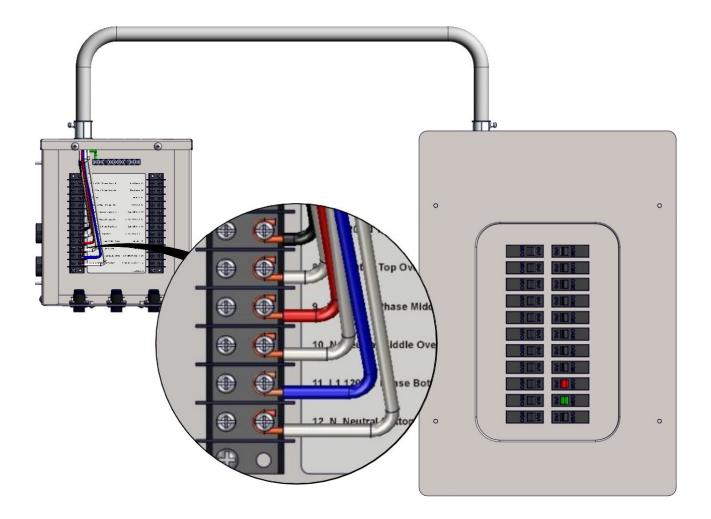




### **Input Power to Ovens - World Voltage & Frequency**

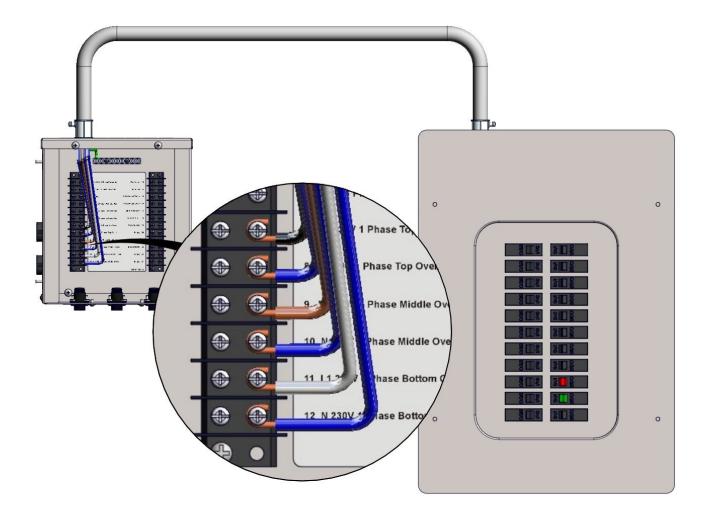


### **HOOD ELECTRICAL CONNECTIONS**

### Input Power to VFD Controller - Standard Voltage & Frequency

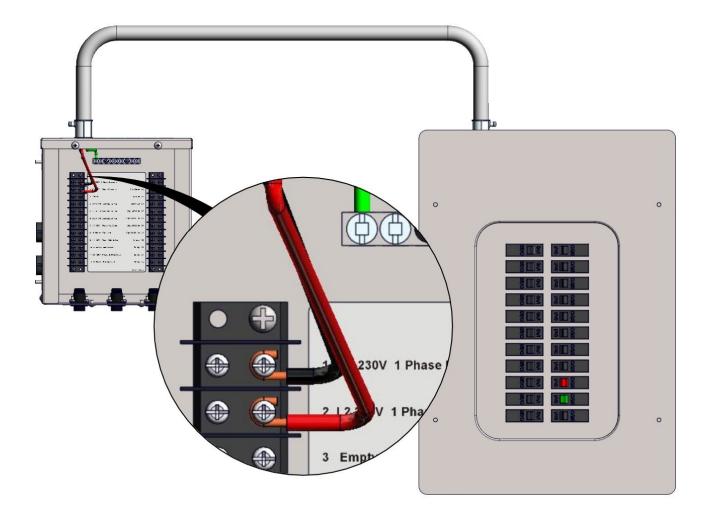




### Input Power to VFD Controller - World Voltage & Frequency

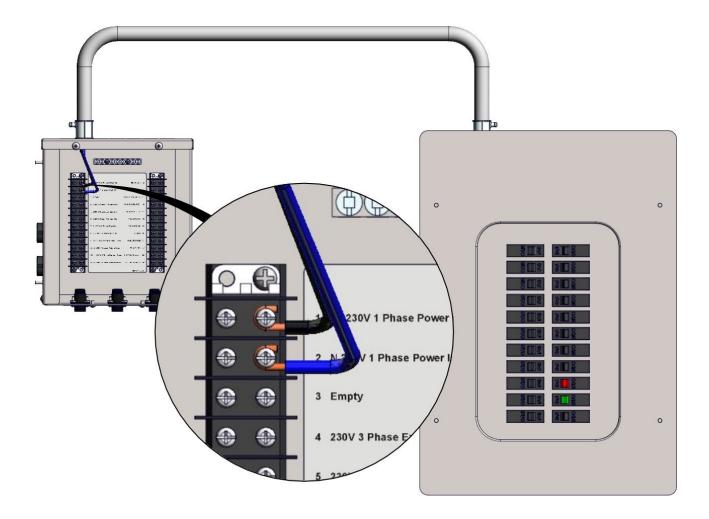


### **HOOD ELECTRICAL CONNECTIONS**

#### Output Power from VFD to Exhaust Fan - Standard Voltage & Frequency

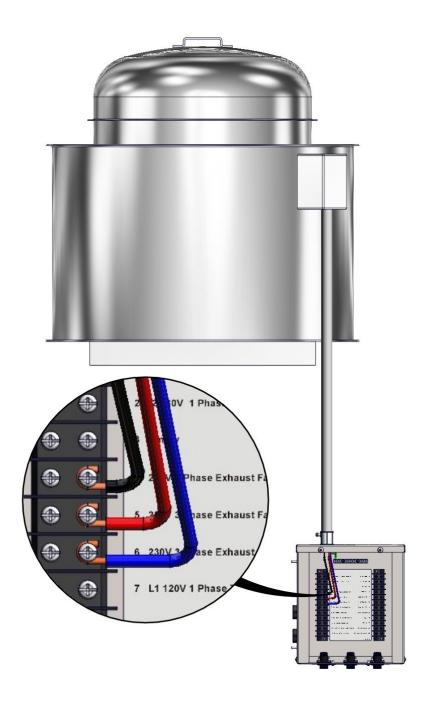




### Output Power from VFD to Exhaust Fan - World Voltage & Frequency

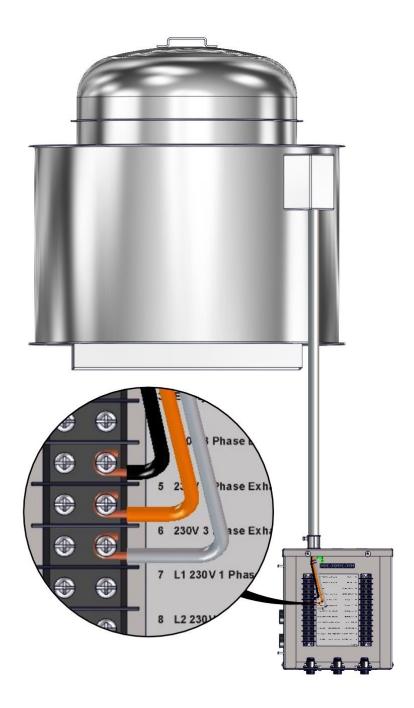

### **HOOD ELECTRICAL CONNECTIONS**

#### MUA Damper Relays - Single Output - Standard Voltage & Frequency

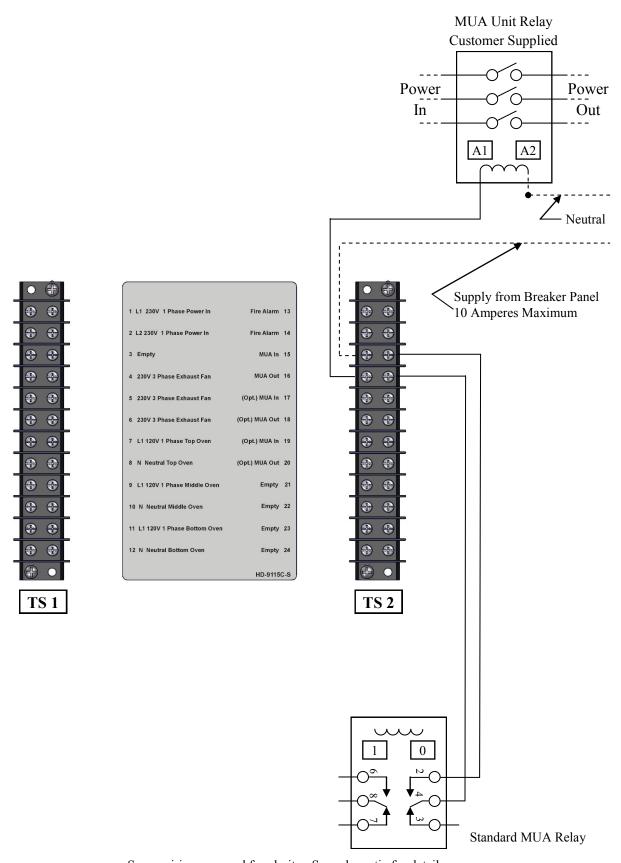


Some wiring removed for clarity. See schematic for details.



Technical Support US: 888-443-2751

### MUA Damper Relays - Single Output - World Voltage & Frequency

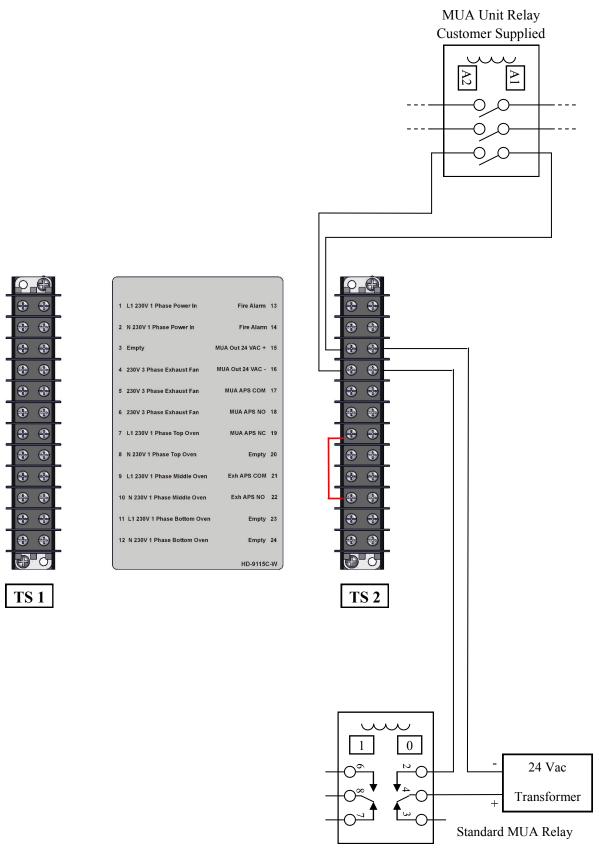


Some wiring removed for clarity. See schematic for details.



Technical Support US: 888-443-2751

### HOOD ELECTRICAL CONNECTIONS

#### MUA Damper Relays - Multiple Output - Standard Voltage & Frequency

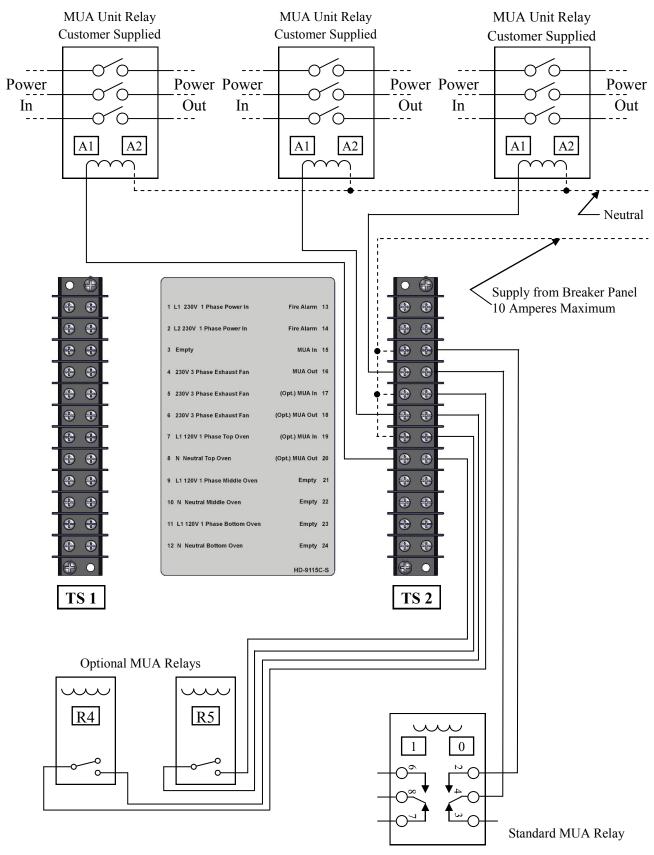


Some wiring removed for clarity. See schematic for details.



Technical Support US: 888-443-2751

#### World Voltage & Frequency-W/Air Proving Switches

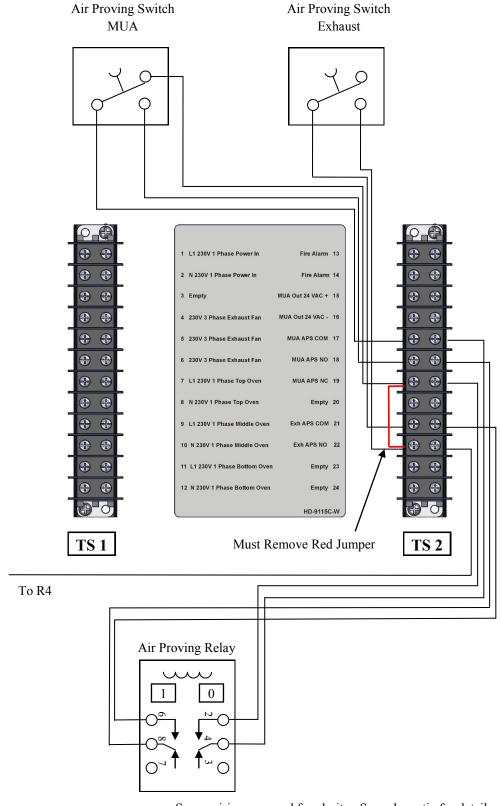

Some wiring removed for clarity. See schematic for details.




### **HOOD ELECTRICAL CONNECTIONS**


#### Fire Alarm Relay - Standard Voltage & Frequency




### Fire Alarm Relay - World Voltage & Frequency

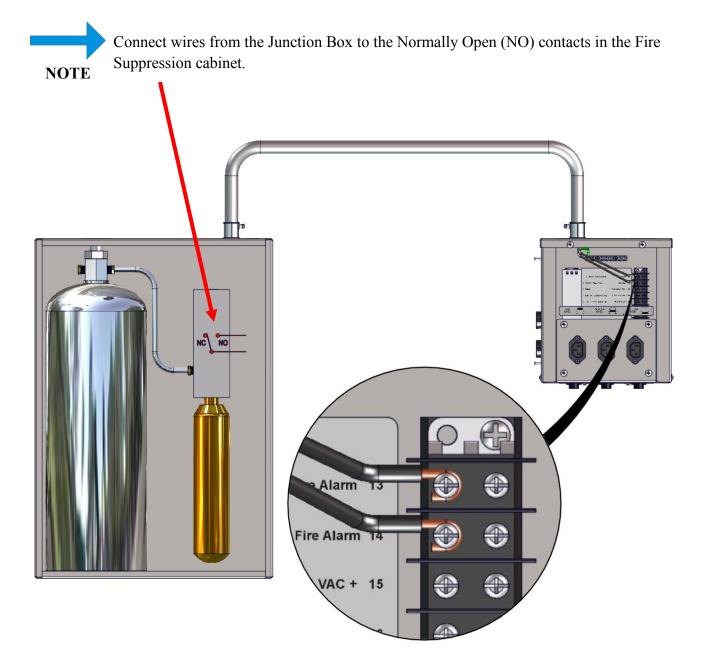

### Prepare Ovens - Remove Lid Screws - Two (2) Only

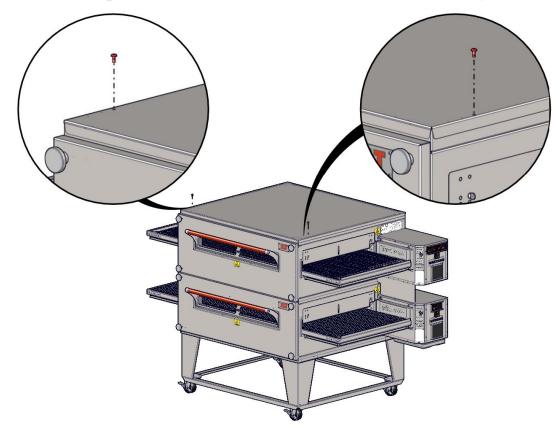


**Prepare Ovens - Control Box Closeout Bracket** 

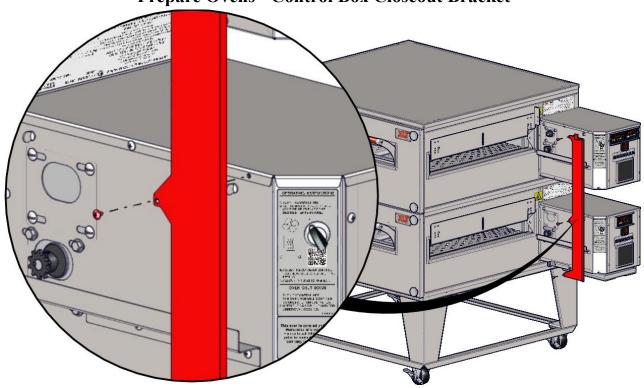


Conveyors have been removed for clarity




### **Prepare Ovens - Front Shroud Brackets**

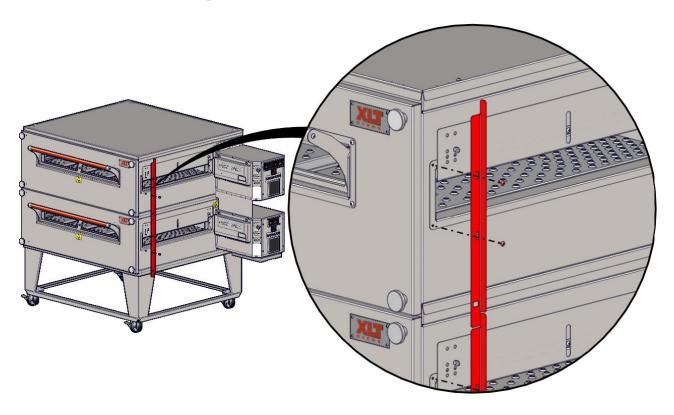


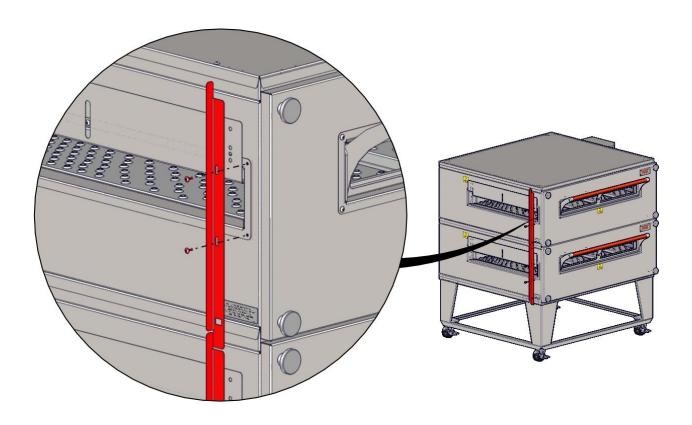

### **Prepare Ovens - Bottom Rail Bracket**

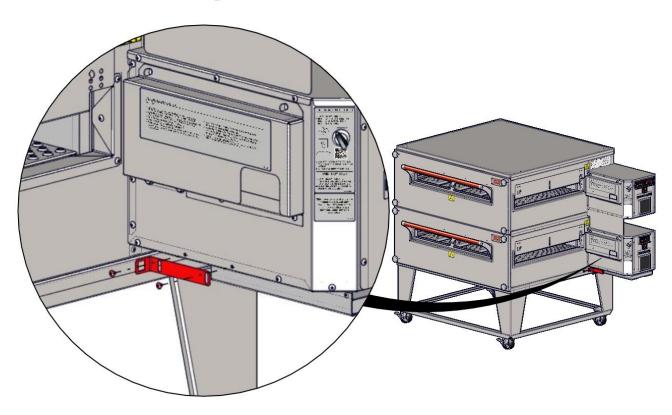


**Prepare Ovens - Control Box Side Closeout** 

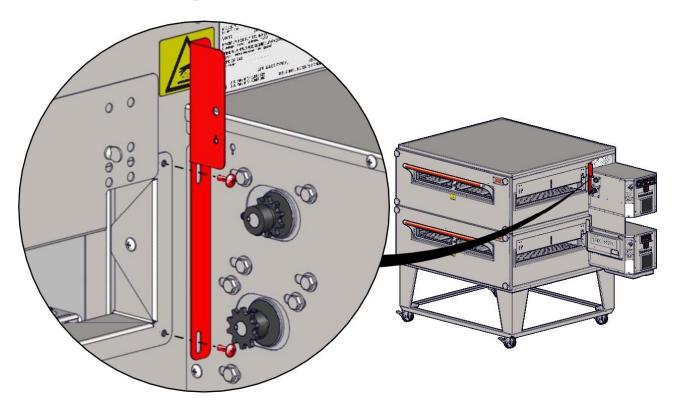




### **Prepare Ovens - Rear Shroud Brackets**

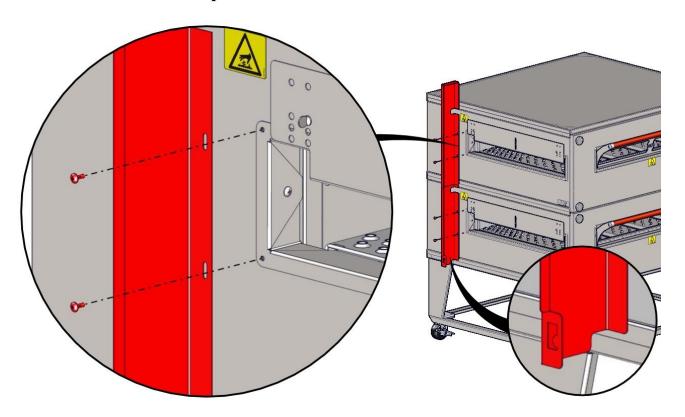


# **Prepare Hood**

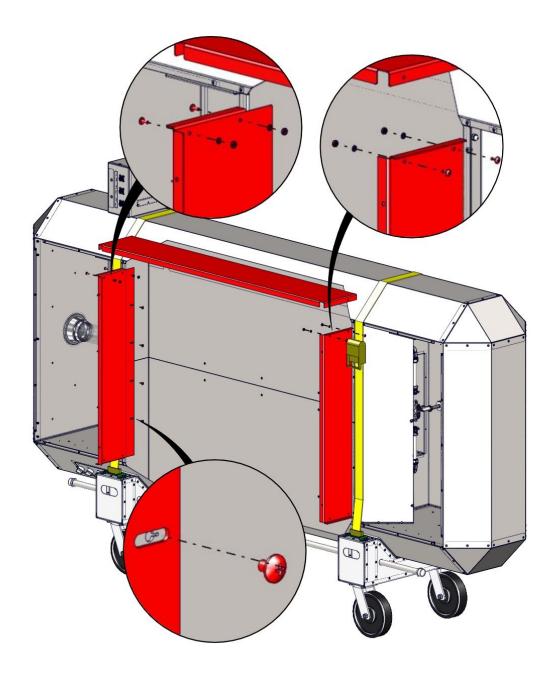




### **Lifting Gear Setup**

AVI hoods can easily be moved and stacked with the proper lifting equipment. The use of XLT approved lifting equipment is highly recommended. Contact XLT for more information.

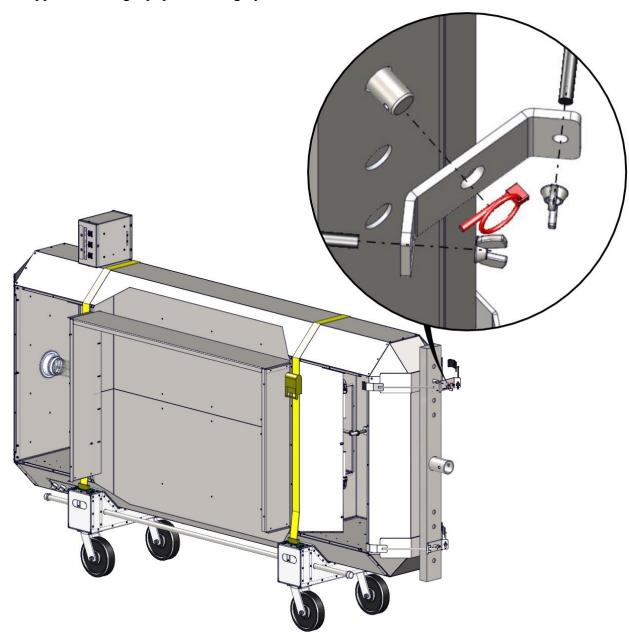

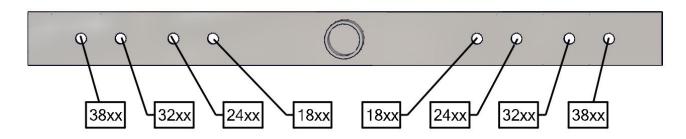

#### **Lifting Jack Setup**



- Inspect cable prior to each use.
- If cable is frayed or shows signs of excessive wear & tear, DO NOT USE until cable is replaced.
- Check for smooth operation. The cable should not be pinched & should pass smoothly over the pulley on top of the pole assembly.
- At a minimum replace the cable annually with wire rope that meets or exceeds the jack manufacturer's specifications.
- Do not exceed the stated capacity of the jack.





Technical Support US: 888-443-2751

### **Stacking Hood on the Ovens**




**DANGER** 

Failure to engage the Lifting Jacks into the Lifting Pipe properly and completely will result in damage, injury, or death from a falling hood.



- Both jacks should be raised in unison, otherwise they may bind and a dangerous situation will develop.
- Do not put any part of yourself under the hood at any time.
- The hood is top heavy. Be careful.

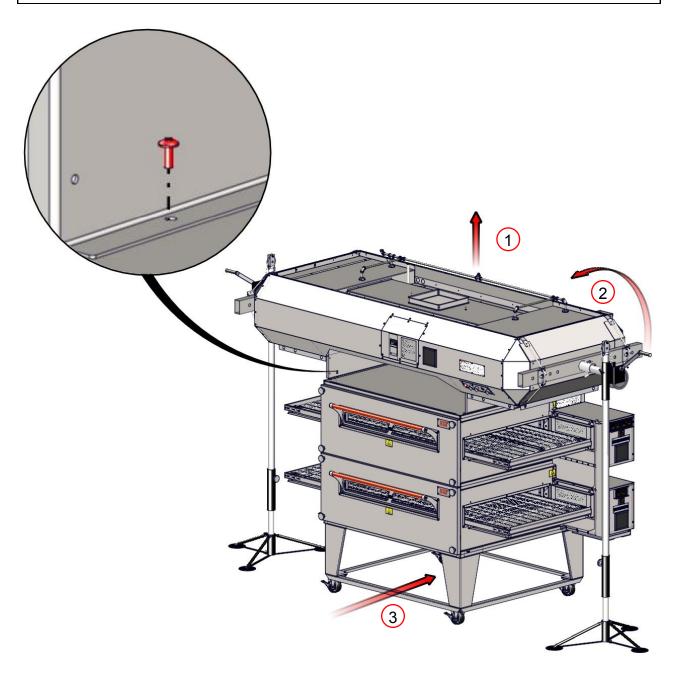


Technical Support US: 888-443-2751

### **Hang Hood From Ceiling Joists**



# **Hood Must Be Suspended From Ceiling Joists**

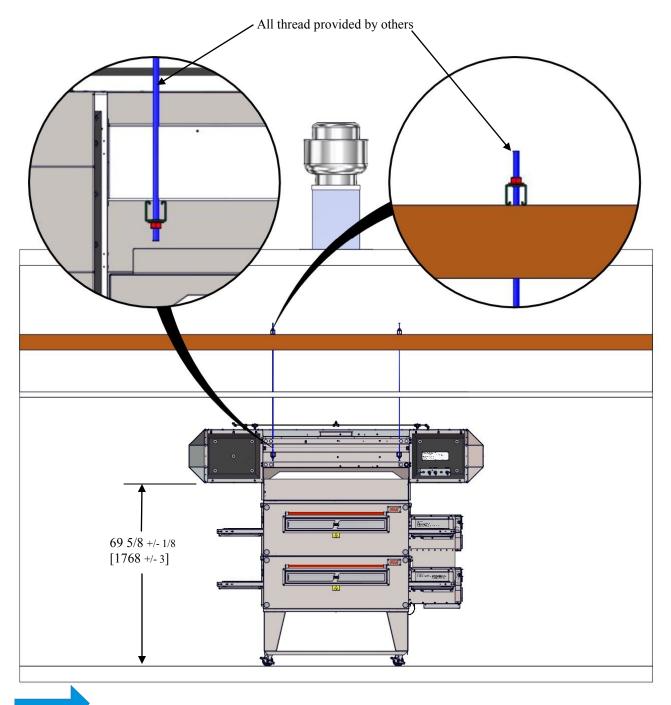


NOTE

This measurement is from the finished floor to the bottom of the suspended hood.


Technical Support US: 888-443-2751



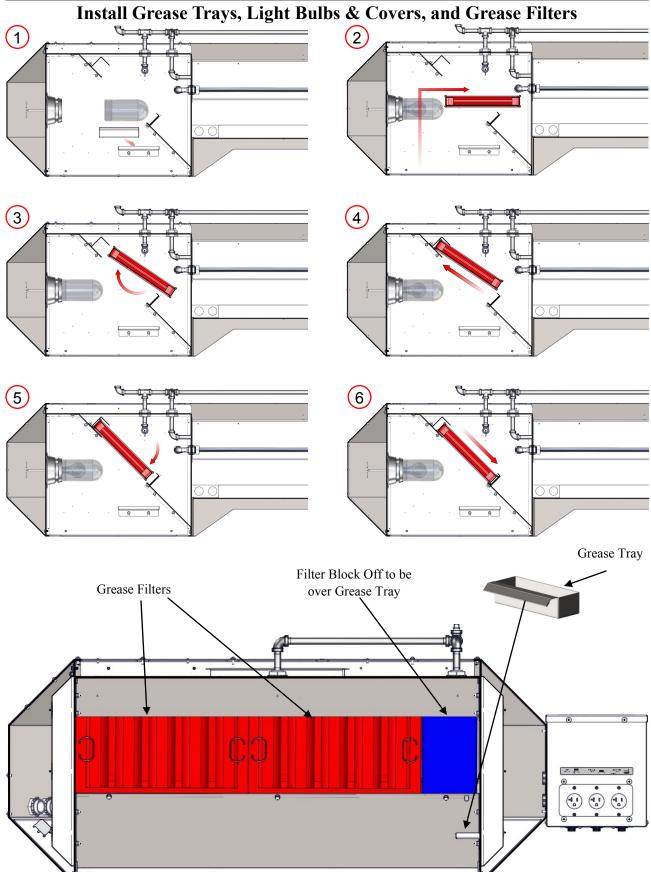

Technical Support US: 888-443-2751 Simple. Smart.

### **Install Shroud Hanging Brackets**

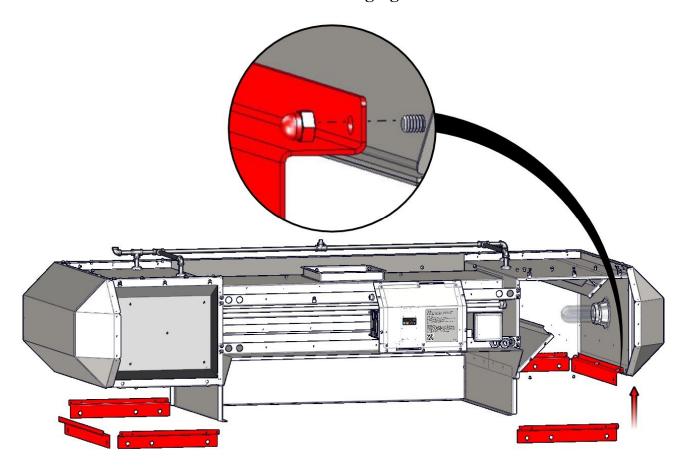


Parts Removed For Clarity




# HOOD INSTALLATION

## **Install Corner Posts**

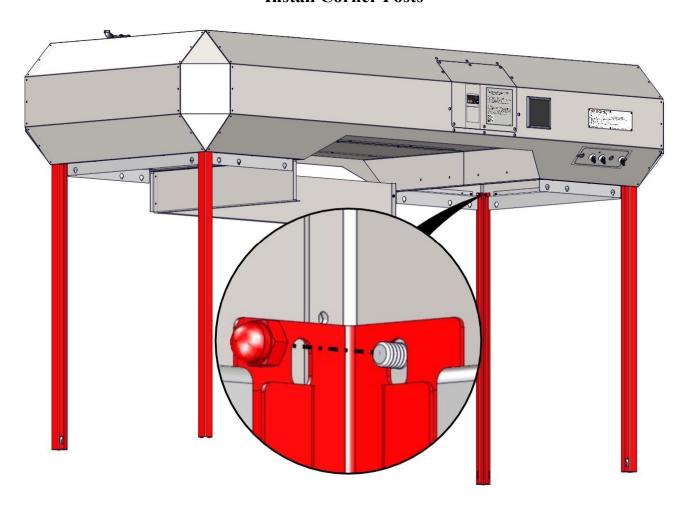


# HOOD INSTALLATION

## **Install Bottom Rails**

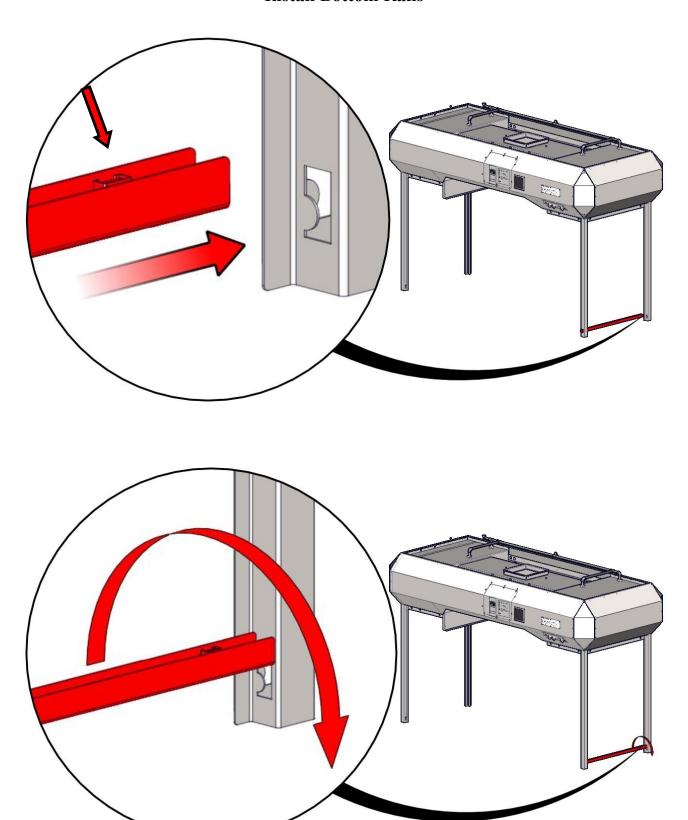


## **Install Bottom Rails**

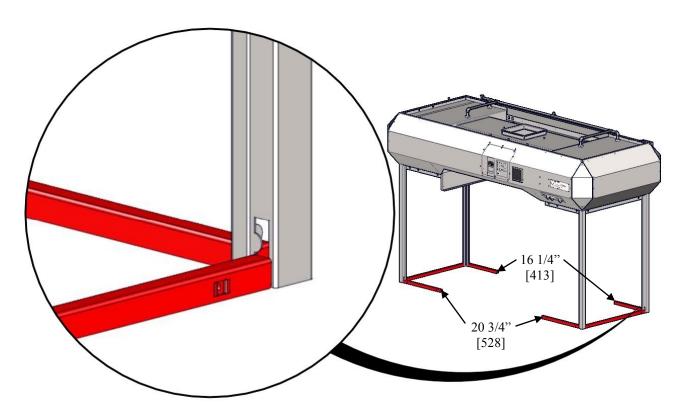

## HOOD INSTALLATION


## **Install Control Box Upper Closeout**

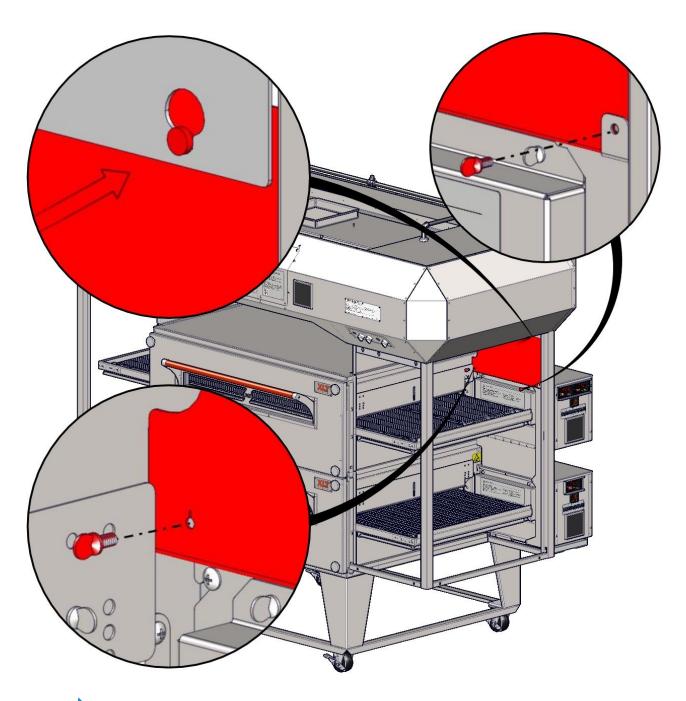



If installing a 70" model, the same will apply for the LH side of ovens.


## **Install Shroud Panels - Front and Ends**

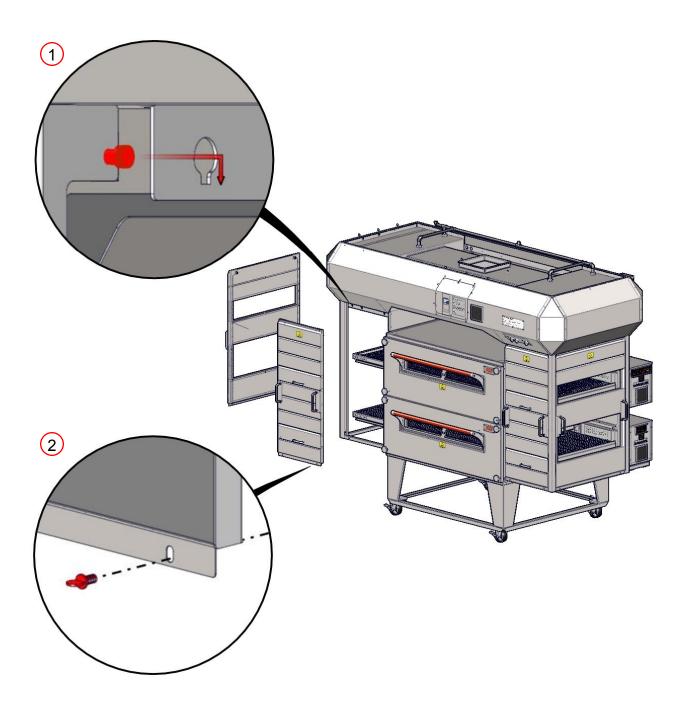



## HOOD INSTALLATION

## **Install Back Shroud Panel**

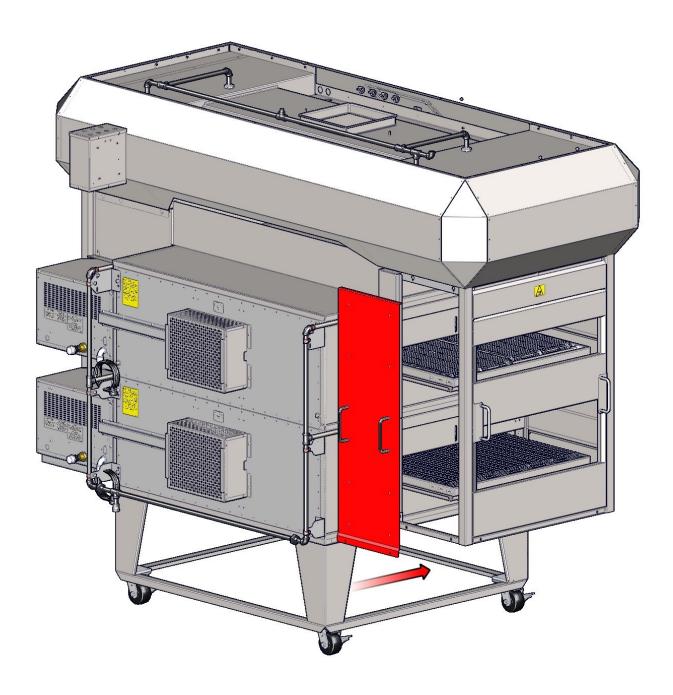




If installing a 70" model, refer to page 76



### **Install Hood Control Cord Assembly**

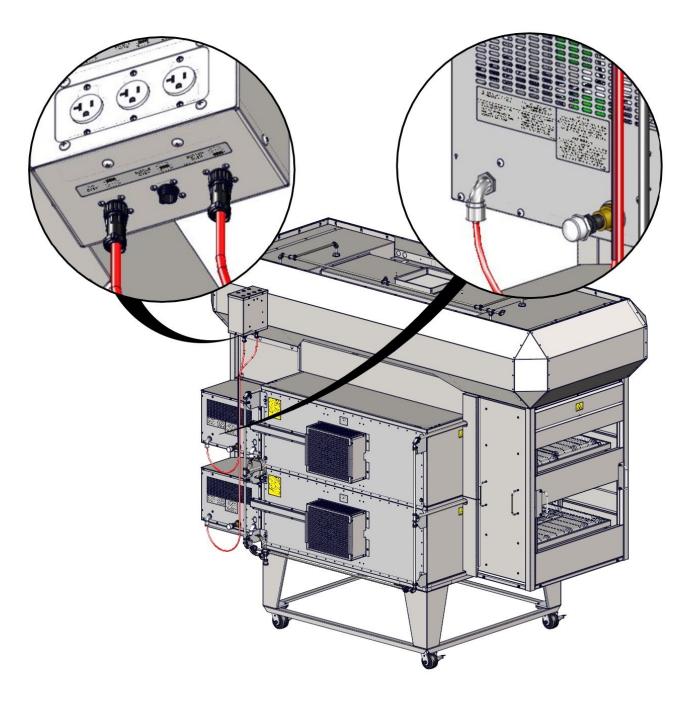



All hoods are outfitted with three (3) switch relocation outlets, regardless of how many XLT Ovens are installed. For a single oven use "Top" location. For a double stack use "Top" location for upper oven and "Bottom" location for lower oven, leaving "Middle" location open.


Insert and lock each oven control cord into the designated location on the bottom of the hood control box.


## HOOD INSTALLATION

## **Connect Hood Control Cord Assembly**

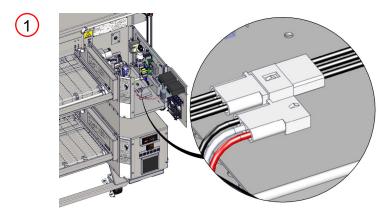

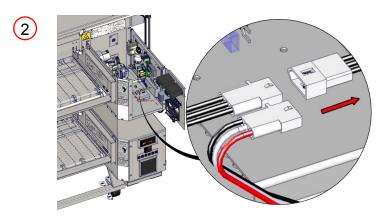

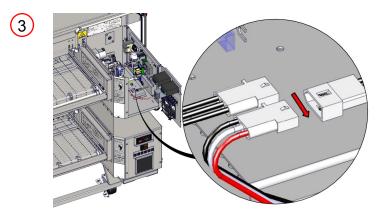

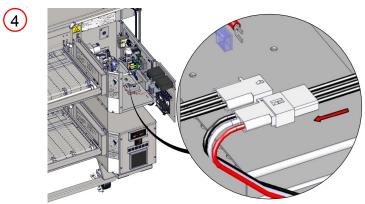



### **HOOD INITIAL START-UP**

### **Variable Frequency Drive Adjustments**

All AVI Hoods are functionally tested at the factory. Operation is verified, and adjustments are made to ensure proper operation. However, field conditions are sometimes different than factory conditions. These variables make it necessary to have an authorized service technician verify operation and make field adjustments if needed. The following items must be checked and verified to meet the specifications and requirements stated in this manual prior to the hood being commissioned:

- Correct fan rotation
- Balanced make-up air


The Initial Start-Up Checklist must be completed at time of installation, signed by the Customer and returned to XLT Ovens to initiate Warranty Policy.

	VFD Controller Settings						
	Switches On					2055 0 2050	
	Top	Middle	Bottom	1832 & 2440	3240, 3255 & 3270	3833 & 38/0	
Single	X			20 Hz	25 Hz	30 Hz	
Double	X			20 Hz	25 Hz	30 Hz	
			X	35 Hz	40 Hz	45 Hz	
	X		X	35 Hz	40 Hz	45 Hz	
Triple	X			20 Hz	25 Hz	30 Hz	
		X		30 Hz	35 Hz	40 Hz	
			X	40 Hz	45 Hz	50 Hz	
	X	X		30 Hz	35 Hz	40 Hz	
	X		X	40 Hz	45 Hz	50 Hz	
		X	X	40 Hz	45 Hz	50 Hz	
	X	X	X	45 Hz	50 Hz	55 Hz	
Fire Suppression				60 Hz DO NOT CHANGE			

The VFD controller is adjusted at the factory to the values displayed in the chart below.

If you require either more or less air flow, follow these steps:

- 1. Remove Hood access panel and make sure the circuit breaker is in the ON position.
- 2. Turn at least one (1) oven switch ON. The VFD display should show the POWER and RUN LED lamps lit up, and a numeric value should appear in the window display.

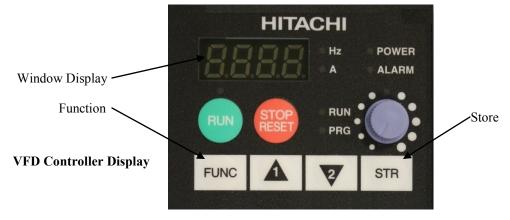

### 82

## **HOOD OPERATOR CONTROLS**

- 3. Press & hold the <FUNC> key until <**d001**> displays.
- 4. Use the Up/Down arrows to reach <**F001**>.
- 5. Press the <FUNC> key one (1) time. A frequency will display according to the switches that are ON per the chart below.
- 6. Turn all oven switches OFF. The display should read <0.0>.
- 7. Turn ON the oven switches to be set. For example, both Top and Bottom ovens, or Top oven only, or Bottom oven only, etc.
- 8. Press the Up/Down arrows until you reach the desired initial settings.
- 9. Press the <STR> key once to store the new setting.
- 10. Repeat steps 6-8 for additional settings as needed.
- 11. When finished, turn all of the oven switches to the OFF position.
- 12. Press the <FUNC> key until <**d001**> appears in the display.
- 13. Press the <FUNC> key one more time. The actual frequency will appear in the window display.
- 14. Press the <STR> key one time to store the values.

The control switches are located on the front of the hood.





When XLT Ovens are outfitted with AVI Hoods, the main switch on the oven is disabled and no longer operates. The switch on the AVI Hood overrides the oven switch.


### **Hood Operation**

- 1. Turn the light switch on. (Bulbs not included with hood)
- 2. Turn the desired oven switch on. Refer to the Oven start-up section for instructions on how to adjust temperature and conveyor speed. The oven(s), exhaust fan, and make-up air unit will be activated by this switch if the AVI Hood is installed according to this manual.
- 3. When additional oven switches are turned on, the VFD will automatically increase the exhaust fan speed.
- 4. When shutting down the ovens, turn the desired oven switch off. The make-up air unit will shut off. The ovens and exhaust fan will shut off after about 30 minutes. Refer to the Oven shutdown section for instructions.
- 5. Do not press the <STOP/RESET> key on the Variable Frequency Drive itself. The RUN and POWER LED should stay lit all of the time.




Technical Support US: 888-443-2751 Technical Support INTL: 316-943-2751

The valance kit size is determined by AVI Hood size & distance from the finished floor to the installed drop ceiling height. The valance kit screws directly to the AVI Hood & does not require any structural support. The plastic coating must be removed from all parts prior to installation.

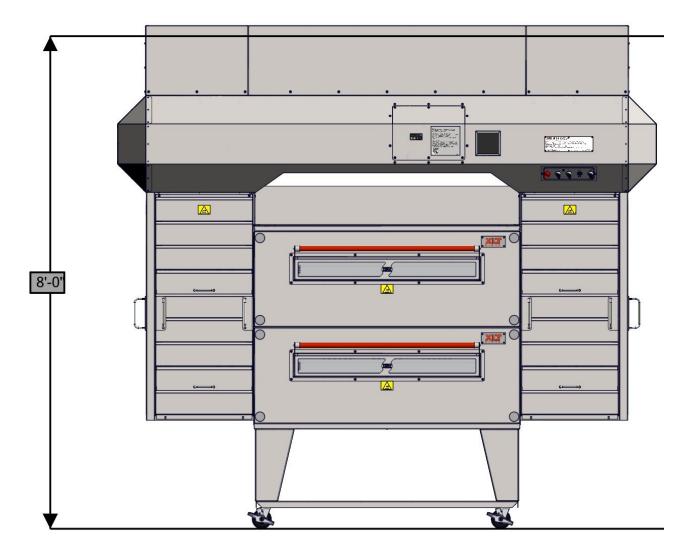


AVI Hood valance kits are available for different floor to ceiling heights. Contact XLT Ovens or your designated representative for more information.

## **Install Valance Brackets**

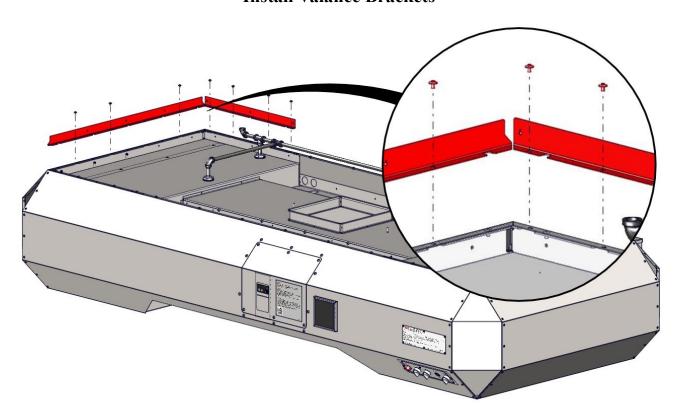


**Install Front & Back Panels** 

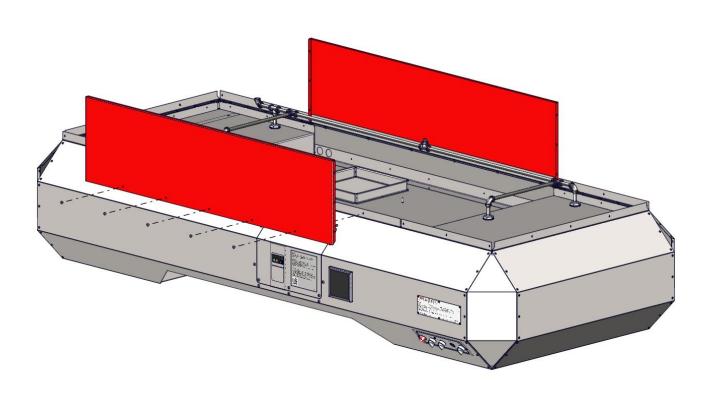




Technical Support US: 888-443-2751

## **Install Corner Panels**

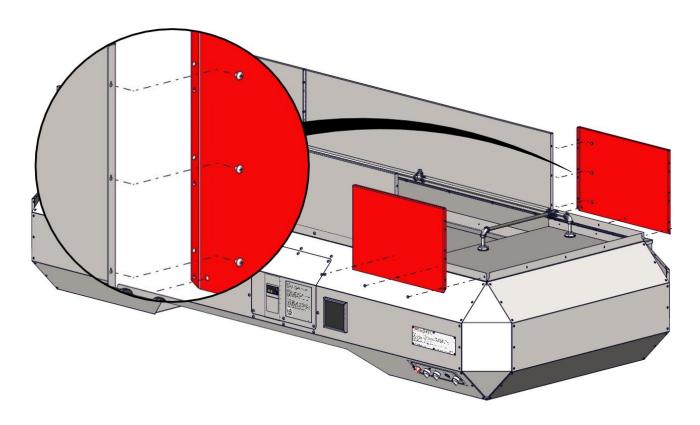


## **Install End Panels**

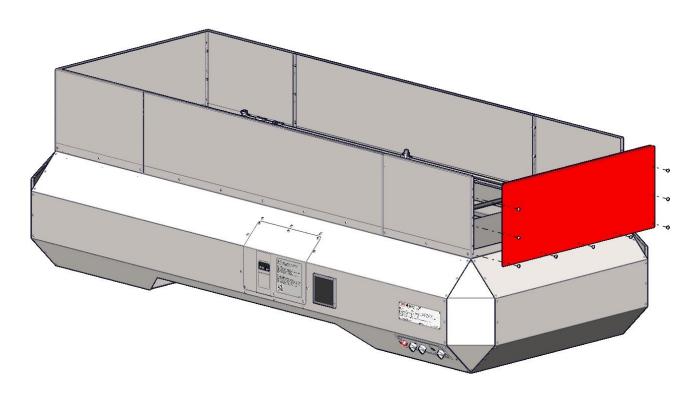



Technical Support US: 888-443-2751

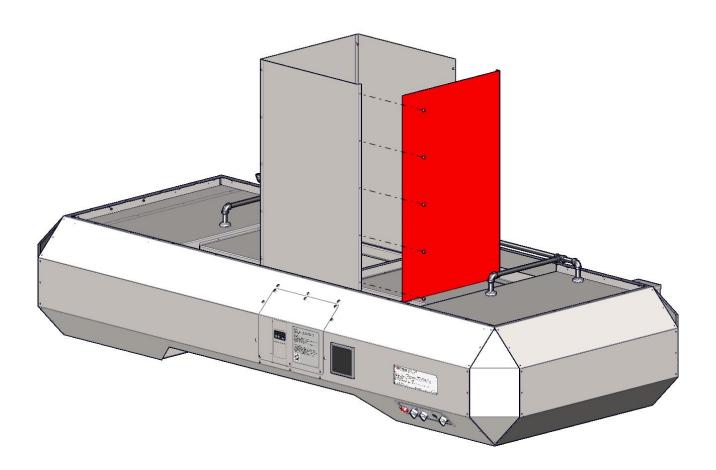



### **HOOD CLEANING**

Your AVI hood is constructed of stainless and aluminized steel. Check application restrictions on product label prior to usage. Observe recommended precautionary and safety measures as dictated by the product manufacturer.

Do not use abrasive or caustic cleaners. Abrasive pads will scratch stainless steel surfaces. Areas with heavy buildup should be sprayed and allowed to soak for up to 5 minutes prior to wiping clean. Always wipe with the "grain" of the surface to maintain appearance.

Hood Cleaning & Maintenance Schedule						
		Daily	Weekly	Monthly	Semi- Annual	As Required
Cleaning						
	Wipe down Front, Sides, & Top					
	Clean Light Globes					
	Empty & Clean Grease Trays					
	Clean Grease Filters					
	Clean Duct and Exhaust Fan					
Inspection						
	Check Indicator Lamp					
	Check Alarm Indicator					
	Check Grease Trays					
	Check Grease Filters					
Adjust						
	No Adjustments Necessary					
Lubricate						
	No Lubrication Required					
Replace						
	Light Bulbs					

Schedule provided as a guide only. Frequency of cleaning may vary as needed.



Oven must be cool and the electric cord unplugged before any cleaning is done.

#### **DANGER**



Shroud Panels can weigh up to 60 lbs [27 kg]. Use caution when lifting.

#### **CAUTION**

DO NOT spray liquid cleaning agents in the following locations:



• Hood electrical box (located on back of upper portion)

• VFD Control Panel CAUTION

Refer to the Hood Installation Section for disassembly and reassembly.



Technical Support US: 888-443-2751

### 88

## **HOOD TROUBLESHOOTING**

Before troubleshooting the hood:

- 1. Make sure that the RUN lamp and POWER lamp are lit.
- 2. Check to see that the breaker in the service panel is not tripped.
- 3. Check to see that the breaker on the hood is not tripped.
- 4. Make sure the Switch Relocation Cords (SRC) are properly installed to the oven(s).
- 5. Check to see that the grease filters are clean & installed properly.
- 6. Check to see if the exhaust fan is rotating in the correct rotation. (applies to new installations)

In the occurrence that the VFD controller has an ERROR Code displaying. Follow these steps to clear them

#### Alarm/Error Codes:

- E01-E04 Inverter output was short circuited
- E05 motor overload is detected by electronic thermal function.
- E07 DC bus voltage exceeds a threshold
- E09 DC bus voltage is below a threshold
- E14 Ground fault detected between controller output and motor.


#### **Alarm/Error Code Reset:**

- 1. Check VFD display for error code and record it.
- 2. Clear alarm code by pressing and holding the red <stop/reset> button on the control panel for 5 seconds.
- 3. Normal operation resumes with no error codes.
- 4. If error codes return, contact XLT customer service.

If the corrective actions listed above do not correct the problem, then XLT has qualified customer service personnel that can provide assistance on any type of XLT Oven or AVI Hood problem you may experience. Customer Service is available at 888-443-2751 24/7/365, or visit <a href="https://www.xltovens.com">www.xltovens.com</a>.


For repairs or maintenance of the fire suppression system and components, contact the local Ansul dealer or XLT for assistance.



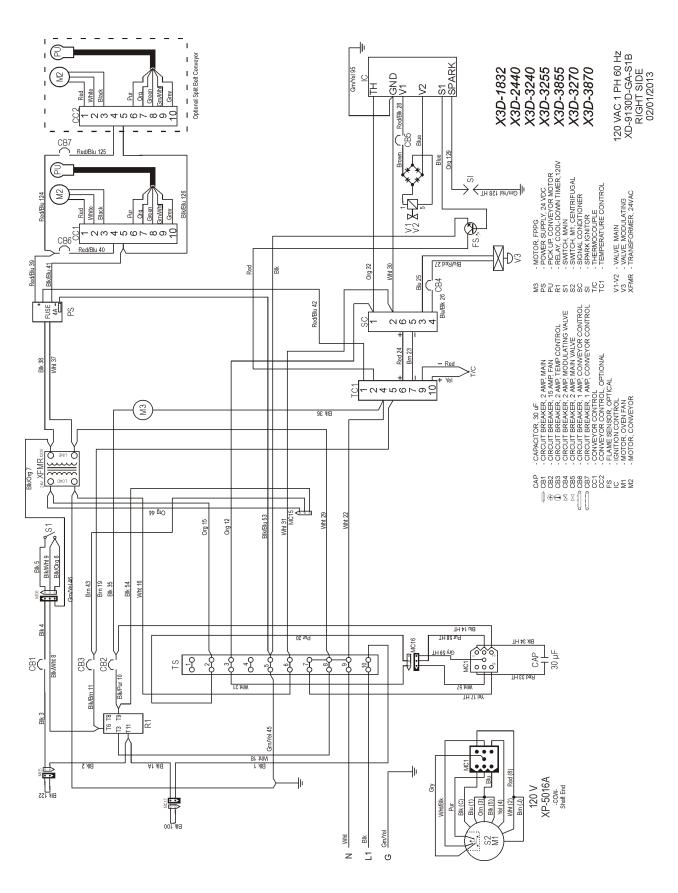




## 90 OVEN SCHEMATIC - WORLD & KOREA 1 BOX 230 VAC

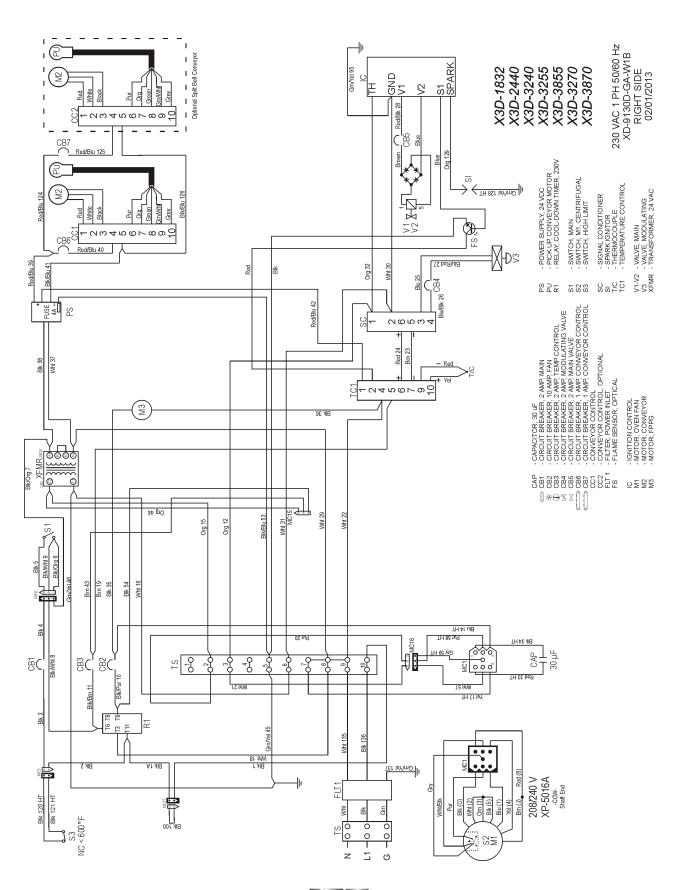




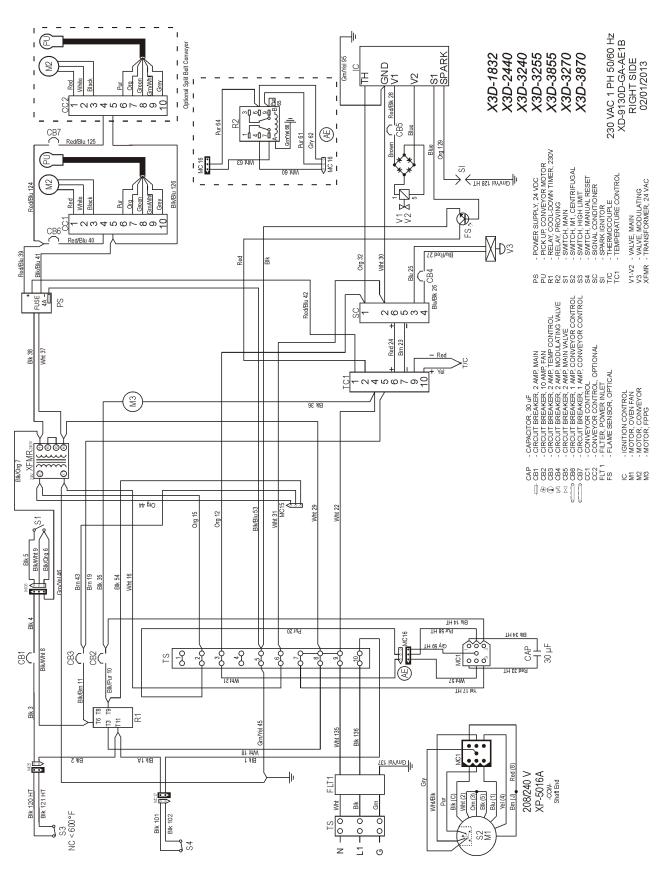


Technical Support US: 888-443-2751



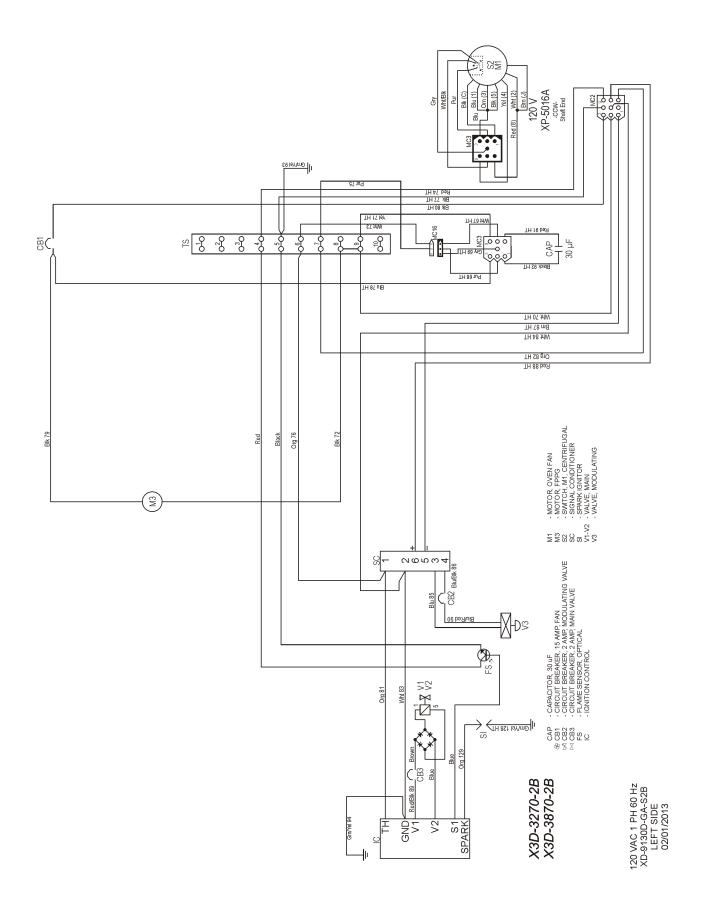




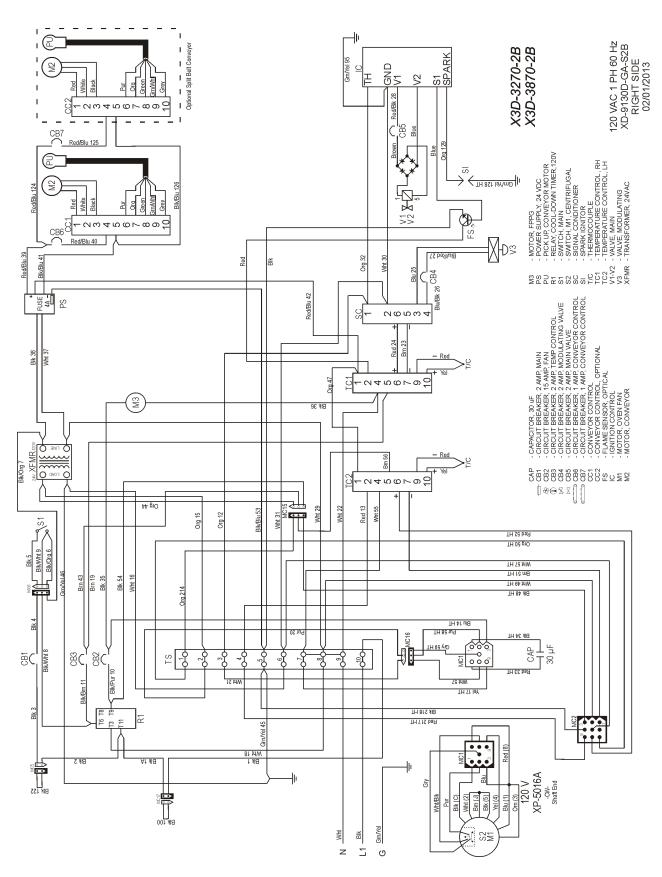



Technical Support US: 888-443-2751



## 94 OVEN SCHEMATIC - WORLD & KOREA 2 BOX LH 230 VAC

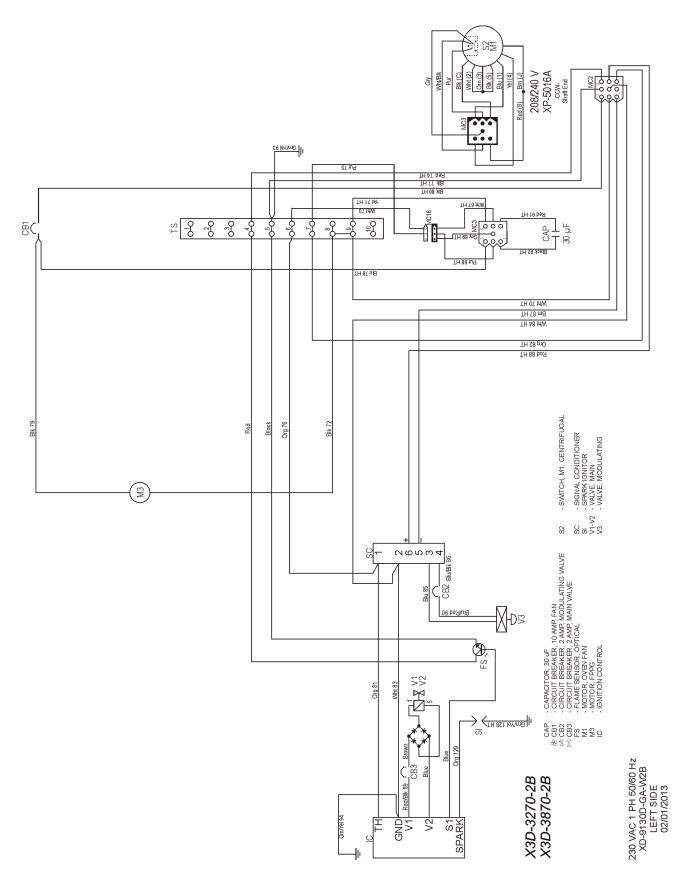


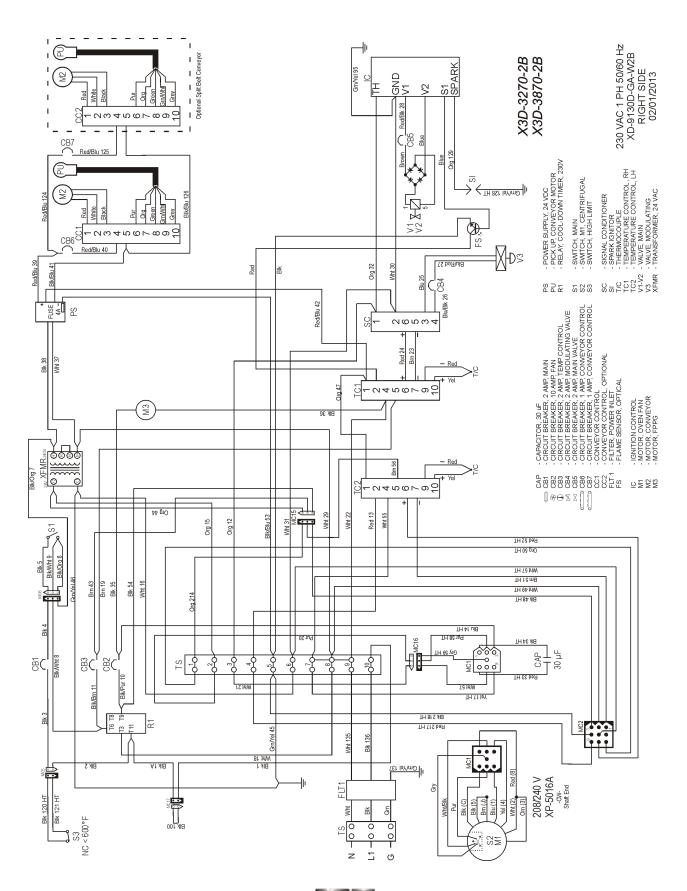


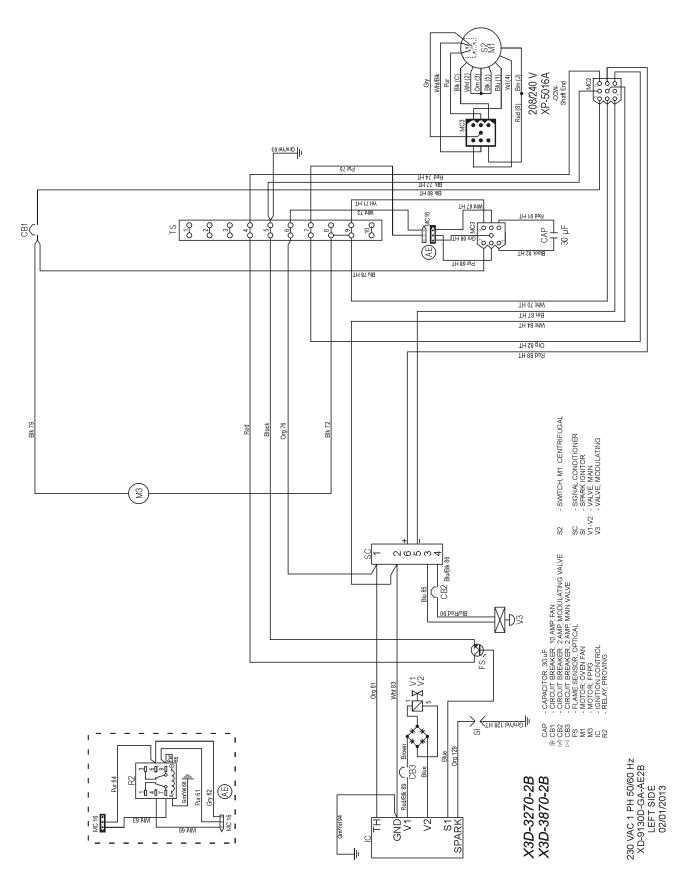

Technical Support US: 888-443-2751




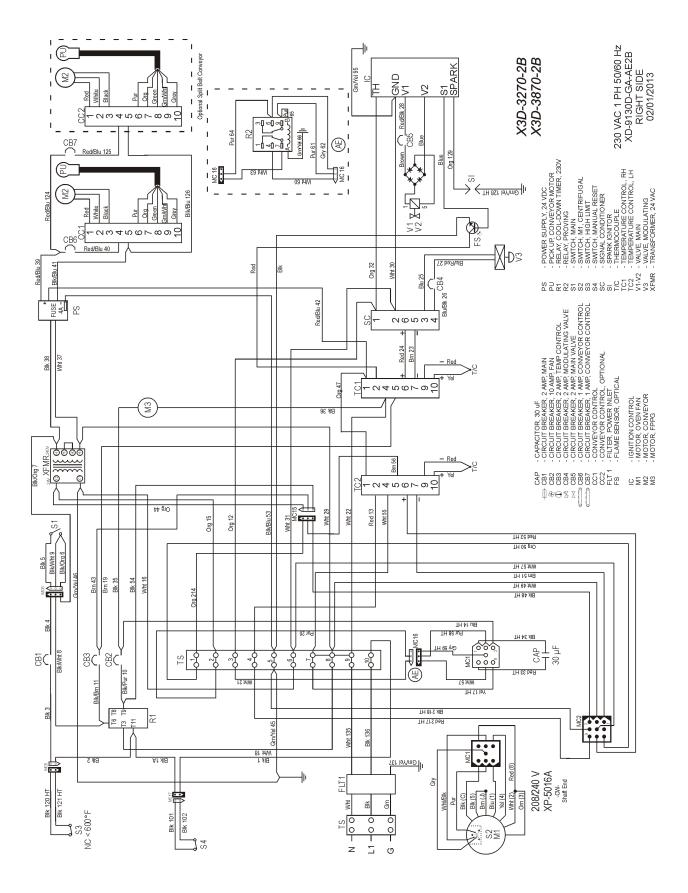


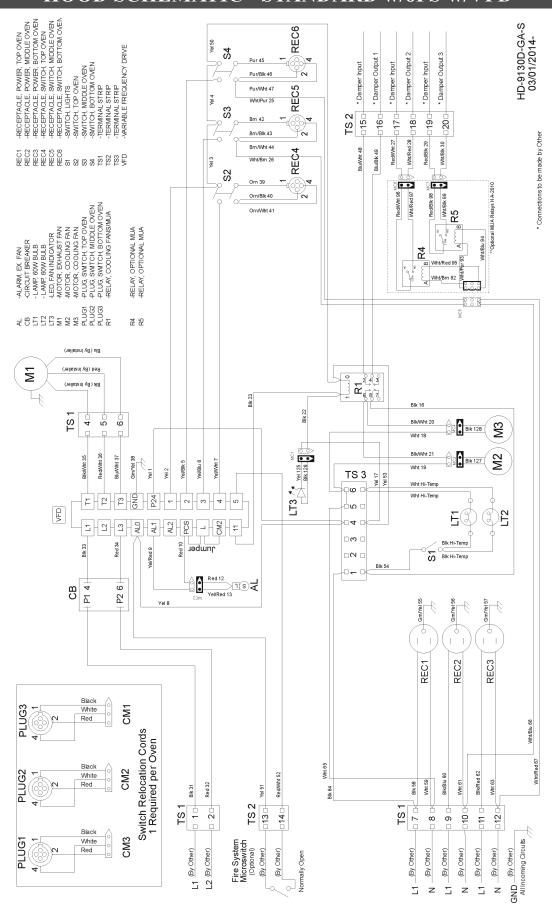






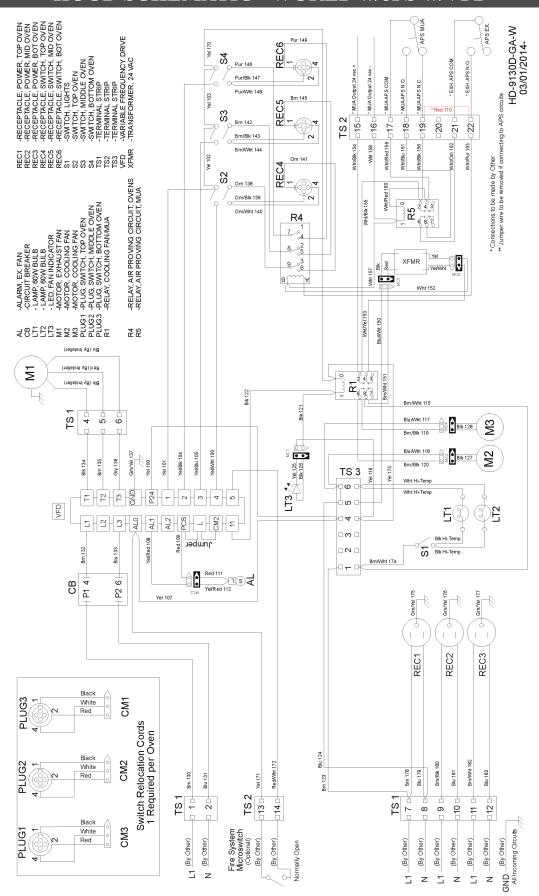

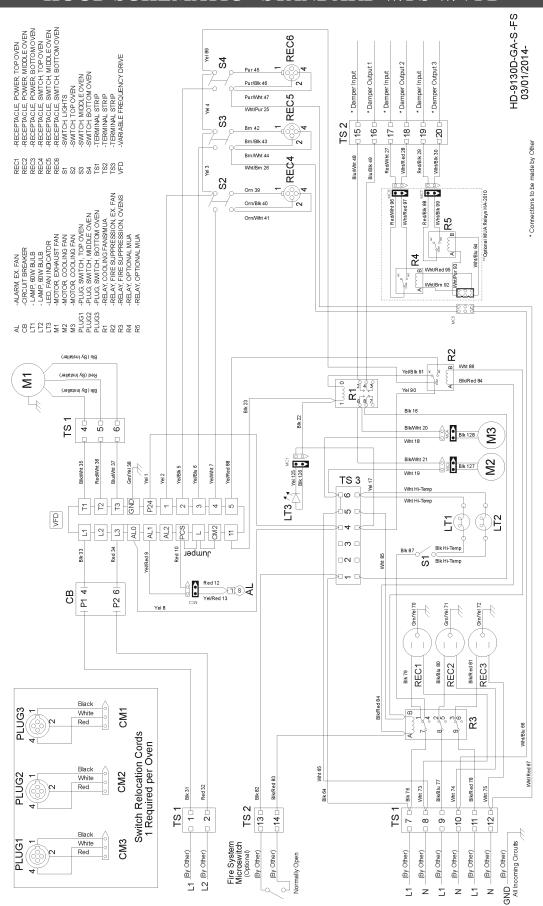

Technical Support US: 888-443-2751



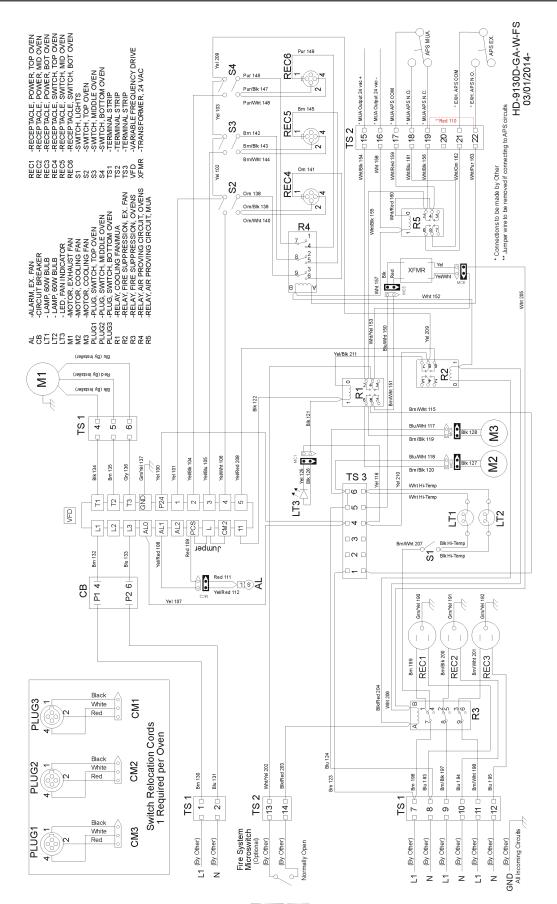

# HOOD SCHEMATIC w/oFS-w/oVFD

 L1
 - LAMP, 60W BULB
 RECS - RECEPTACLE, SWITCH, MIDDLE OVEN


 L2
 - LAMP, 60W BULB
 RECS - RECEPTACLE, SWITCH, BOTTOM OVEN

 PLUG1 - PLUG, SWITCH, TOP OVEN
 S1
 - SWITCH, LIGHTS

 PLUG2 - PLUG, SWITCH, MIDDLE OVEN
 S2
 - SWITCH, TOP OVEN

 PLUG3 - PLUG, SWITCH, BOTTOM OVEN
 S4
 - SWITCH, MIDDLE OVEN

 REC4
 - RECEPTACLE, SWITCH, TOP OVEN
 S4
 - SWITCH, BOTTOM OVEN

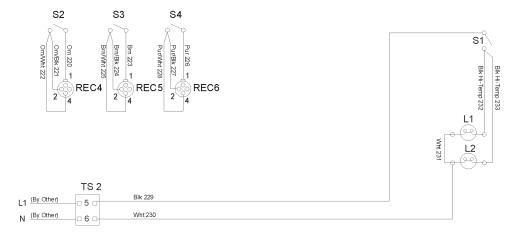

GND (By Other) All Incoming Circuits HD-9130D-NV 03/01/2014



Product Certifications and Applicable Codes

### Standard XLT Oven Certifications 1:

#### **XLT Gas Ovens:**

- 1. ANSI Z8311-2006/CSA 1.8-2006 Standard for Gas Food Service Equipment
- 2. ANSI/NSF 4-2006e Sanitation for Commercial Cooking Rethermalization &

Powered Hot Food Holding & Transportation Equipment

#### **XLT Electric Ovens:**

- 1. ANSI/UL197-CSA C22.2 Commercial Electric Appliances
- 2. ANSI /NSF 4-2006e Sanitation for Commercial Cooking Rethermalization &

Powered Hot Food Holding & Transportation Equipment

### World XLT Oven Certifications<sup>1</sup>:

#### **XLT Gas Ovens:**

- 1. EN 60335-2-42:2003 + A1:2008, used in conjunction with EN 60335-1:2002, Safety of Household Appliances and Similar Electrical Appliances
- 2. EN 60335 A11, A1:2004 + A12, A2:2006 + A1/C1:2007 + A13:2008 Low Voltage Directive (LVD)
- 3. EN 55014-1:2006 EN 61000-3-2:2006, EN 61000-3-3:1995 +A1:2001 +A2:2006, Electromagnetic Compatibility. (EMC)
- 4. EN 55014-2:1997 +A1:2001, Conducted Emissions, Surge Immunity
- 5. BS EN 203-1:2005+A1:2008, Standard for Safety of Gas Heated Catering Equipment
- 6. BS EN 203-2-1: 2005, Standard for Gas Heated Catering Equipment
- 7. 90/396/EEC. Gas Appliance Directive (GAD)

#### **XLT Electric Ovens:**

- 1. EN 60335-2-42:2003 Safety of Household Appliances and Similar Electrical Appliances
- 2. EN 60335-1:2002 +A11, A1:2004 + A12, A2:2006 + A1/C1:2007 + A13:2008) Low Voltage Directive (LVD)
- 3. EN 6100-6-5 Electromagnetic Compatibility (EMC)
- 4. EN 55014-2:1997 +A1:2001, Conducted Emissions, Surge Immunity
- 5. EN 6100-6-1 EMC Immunity for residential, commercial & light industrial

Simple, Smart.

Technical Support US: 888-443-2751

### 104

## **APPENDIX A**

#### Product Certifications and Applicable Codes - Continued

- 6. EN 5504-1 EMC house hold appliance electric tools & similar appliances
- 7. EN 6100-3-3 +A1+A2 Voltage fluctuation

### Standard & World AVI Hood Certifications 1:

- 1. UL 710 Standard for Safety Exhaust Hoods for Commercial Cooking
- 2. ANSI/NSF 2-2009 Sanitation Food Equipment
- ULC-S646, Standard for Exhaust Hoods and Related Controls for Commercial and Institutional Kitchens

### Australian XLT Oven Certifications 2:

#### **XLT Gas Ovens: (certificate 7373)**

- 1. AS 4563-2004 Commercial Catering Gas Equipment
- 2. AS/NZS 3350.1:2002 Safety of Household & Similar Electrical Appliances.
- 3. AS 5061 / AG 601 Gas Installations

## **Korea XLT Oven Certifications <sup>3</sup>:**

### **XLT Gas Ovens: (certificate GA-107)**

1. Meets KGS-AB338 Facility/Technical/Inspection Code For Manufacture of Commercial Gas Burning Appliances.

Technical Support US: 888-443-2751



<sup>&</sup>lt;sup>1</sup> The noted certifications for XLT ovens and AVI Hood are performed and documented by Intertek Testing Services NA Inc. 165 Main Street, Cortland, NY 13045. Intertek is a nationally and internationally certified testing and accreditation agency.

<sup>&</sup>lt;sup>2</sup> The certifications for Australia are administered and verified by SAI Global Level 37, 680 George St. Sydney NSW 2000

<sup>&</sup>lt;sup>3</sup> 402 Hannuri-daero, Sejong-si, 339-012, Republic of Korea

## Oven Initial Start-up Checklist - Remove & Return to XLT Ovens

<b>1st step:</b> Fill out all informatio	<u>gibly</u>	PO Box 9090				
Start-Up Information	Wichita KS 67277					
Date of Start-Up:			FAX: 316-943-2769			
Start-Up by: \( \sum XLT: \) \( \sum O \)			П П П			
Phone #:		Oven Size:	$\square_{1832} \square_{2440} \square_{3240}$			
Installer Information			∐3255 ∐3270-2B			
Date of installation:  Installed by:   XLT:  O			□3855 □3870-2B			
Installed by: UXLT:UO	ther:		П., П.,			
Company: Installer:_		Heat Sourc	e: □Natural Gas □LP			
Contact Information						
Store Name:						
City: State:	Zip:P!	none #:				
E-mail:						
HVAC/Contractor Contact:  City: State:	Ad	dress:				
City: State:	Zip:Pl	none #:	_ Cell:			
L-man.						
Facility Information	g UStrip Mall	☐New construction ☐	☐Existing location ☐Remodel			
Oven Location: Against wal	1 □In corner □	Island				
TRUE DEL C			ottom oven: Yes No			
Utilities present at installation:						
Customer or store operator shown how to			∐Yes ∐No			
Hood manufacturer		Oven/Hood features expla				
□AVI □ Other	Interl	ock system for non-AVI	hood:			
Gas Requirements			n store (with gas requirements)			
Gas Line Size: Teflon Tap	e: $\square$ Yes $\square$ No		Btu Btu			
If Gas line is not at least 1-1/2'' contact s	tore owner	Oven #2:        Btu           Oven #3:        Btu				
Shut off valve accessible after installation	$\Box$ Yes $\Box$ No		Btu			
One shut off valve per oven:	$\square_{\mathrm{Yes}} \square_{\mathrm{No}}$	Furnace: Btu				
_		Other:Btu				
Sediment Trap installed:	∐Yes ∐No	Total gas requirements for store:Btu				
If No contact store owner this voids warra		Regulator Capacity:Btu				
Gas line purged of air prior to installation	:		Btu			
Fittings tested for gas leaks:	∐Yes ∐No	Are all appliances opera	able UYes UNo			
Electrical		Electrical Supply (per o	ven):			
Electrical utilities accessible:	$\square_{\mathrm{Yes}}  \square_{\mathrm{No}}$	Volts	Amps			
Separate electrical circuit per oven:	$\square_{\mathrm{Yes}}  \square_{\mathrm{No}}$	Hz	Phase			
2nd step: Place 1 control box in service position. Hook manometer to top port on gas valve						
and document incoming gas pres						
Parts & Service Manual for Oven Service Procedures.						
Inlet Pressures: Static Pressure: Is WC within 6-14" WC for Natural Gas or 11-14" WC for LPG.						
$\square$ Yes $\square$ No, contact store owner to adjust. Initial						

## Oven Initial Start-up Checklist - Remove & Return to XLT Ovens

<u>3rd step</u>: Place all control boxes in service position and adjust settings per Parts & Service Manual, remove blue tag from inside control box and connect switch to wire harness. Start each oven and complete form below.

_					
Top Oven	Verify Existing Serial #	$\square_{N/A}$	Proper Belt Tension: Yes No		
			Conveyor Belt Direction: $\Box$ L to R $\Box$ R to L		
			Set Point Temp: Left Right		
	minsec		Fingers in proper location:		
Back Belt Speed:	minsec	□N/A	Fire Suppression Installed: Yes \( \subseteq No		
Left Burner:	2B Ovens Only		Right Burner:		
Shutter Setting: _			Shutter Setting:		
High Bias:	Low Bias:		High Bias: Low Bias:		
Flame Sense µA			Flame Sense µA		
	Verify Existing Serial #		Proper Belt Tension: Yes No Conveyor Belt Direction: L to R R to L		
			Set Point Temp: Left Right		
Seriai #:			Fingers in proper location: Yes No		
	min sec				
Back Belt Speed:	minsec	□N/A	Fire Suppression Installed: Yes \( \subseteq No		
Left Burner:	2B Ovens Only		Right Burner:		
Shutter Setting: _			Shutter Setting:		
High Bias:	Low Bias:		High Bias: Low Bias:		
Flame Sense µA			Flame Sense µA		
<b>Bottom Oven</b>	Verify Existing Serial #	$\square_{N/A}$	Proper Belt Tension: Yes No		
Model #:			Conveyor Belt Direction: $\square$ L to R $\square$ R to L		
Serial #:			Set Point Temp: Left Right		
Front Belt Speed:	:sec		Fingers in proper location: $\Box$ Yes $\Box$ No		
Back Belt Speed:	minsec	□N/A	Fire Suppression Installed: Yes \( \subseteq No		
Left Burner:	2B Ovens Only		Right Burner:		
			Shutter Setting:		
_	Low Bias:		High Bias: Low Bias:		
Flame Sense μA			Flame Sense $\mu A$		
4th step: Document the dynamic pressure with all the gas appliances running.  Inlet Pressures: Dynamic Pressure: Is WC within 6-14" for Natural Gas or 11-14" WC for LPG  Yes No, contact store owner to adjustInitial					
I&O Manual presented to store operator: ☐Yes ☐No Ovens ran for 30 min: ☐Yes ☐No					
Air-born contaminates:   Flour Cornmeal Grease Other					
On-Site dough prep: Yes No Test cook performed: Yes No					
☐ Thin Crust ☐ Thick Crust ☐ Pan ☐ Screen  Other Product:					

Customer Signature: \_\_\_\_\_\_ Date: \_\_\_\_\_

## **Hood Initial Start-up Checklist - Remove & Return to XLT Ovens**


## 1st step: Fill out all information and print legibly

Customer Signature:

XLT Ovens PO Box 9090 Wichita, KS 67277 FAX: 316-943-2769

Installer Information Date of installation:		FAX: 316-943-2769				
Installed by: XLT installer:Company:		<b>Hood Size:</b> □1832 □2440 □3240	□3255			
Phone #:		□3270-2В □3855 □3	870-2B			
Contact Information						
Store Name:Address:						
		hone #:				
E-mail:	Co	ontact Person:				
HVAC/Contractor Contact:	Zin: Ad	ldress:Call:				
E-mail:	_Zipi	dress: Cell:				
Facility Information Freestanding	Strip Mall	☐ New construction ☐ Existing location	Remodel			
Oven Location: Against wall	☐In corner [	Island				
2nd step: Verify all information is correct before turning hood on						
Model #:		Serial #:				
VFD power supplied:		Height from bottom of hood to finished floo	r:			
Volts	Length of duct run (nom top of hood to run).					
Hz		Feet Inches Exhaust fan serial #:	_			
Number of bends in duct run:45°	90°	Rating of exhaust fan:	_ CFM			
Hood hung prior to oven installation:	□Yes □No	Oven switch cords connected to VFD box:	□Yes □No			
Hood hung to local codes:	∐Yes ∐No	Lights operate with switch:	∐Yes ∐No			
Switches face front of ovens:	□Yes □No	Light globes installed over bulbs:	□Yes □No			
VFD box cover replaced after installation:	$\square_{\mathrm{Yes}} \square_{\mathrm{No}}$	Exhaust fan purchased from XLT:	$\square$ Yes $\square$ No			
All shroud panels properly installed:	$\square_{\mathrm{Yes}} \square_{\mathrm{No}}$	Exhaust fan operates with hood switches:	$\square$ Yes $\square$ No			
Grease filters properly installed:	$\square_{\mathrm{Yes}} \square_{\mathrm{No}}$	Correct fan rotation:	$\square$ Yes $\square$ No			
Grease trays properly installed:	$\square$ Yes $\square$ No	Fire suppression relay in VFD box utilized:	$\square$ Yes $\square$ No			
Crumb trays easily removable:	$\square$ Yes $\square$ No	VFD properly programmed:	$\square_{\mathrm{Yes}} \square_{\mathrm{No}}$			
Oven power cords connected to VFD box:	$\square_{\mathrm{Yes}}  \square_{\mathrm{No}}$	Valance Kit:	$\square_{\mathrm{Yes}}  \square_{\mathrm{No}}$			
Electric Oven	$\square$ N/A	Duct Valance Kit:	$\square$ Yes $\square$ No			
Air balance test performed:	$\square$ Yes $\square$ No	Smoke test preformed:	□Yes □No			
Notes:						

\_\_\_\_\_\_Date: \_\_\_\_\_

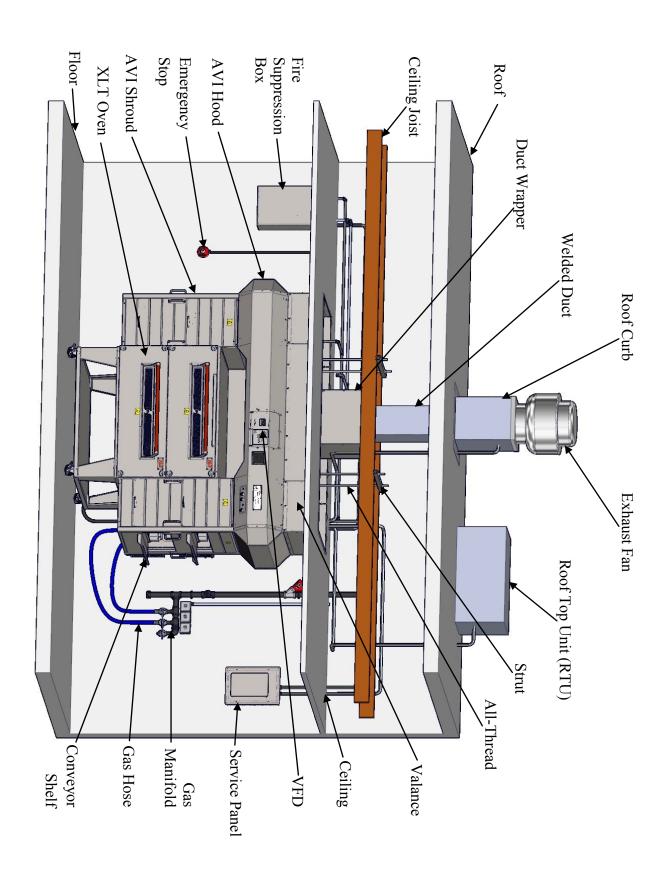



Technical Support US: 888-443-2751

# NOTES 109

